 
 


NTID721 For household only

- Before use, please read this manual and be sure to use the appliance properly. The manufacturer assumes no responsibility for the appliance when it is used in ways other than the proper method described in this manual. In particular, be sure to read the Safety Warnings.
- Store the manual in a location where it can be easily accessed at any time.

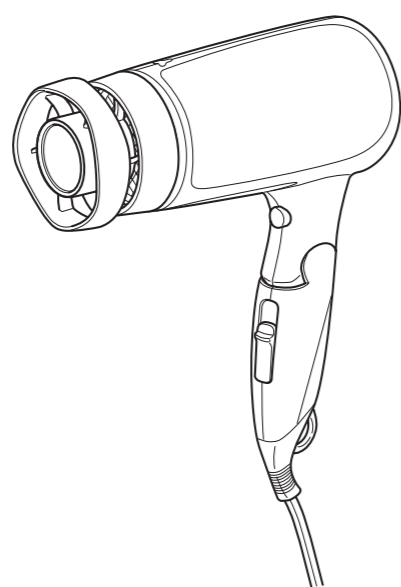

Part names and functions

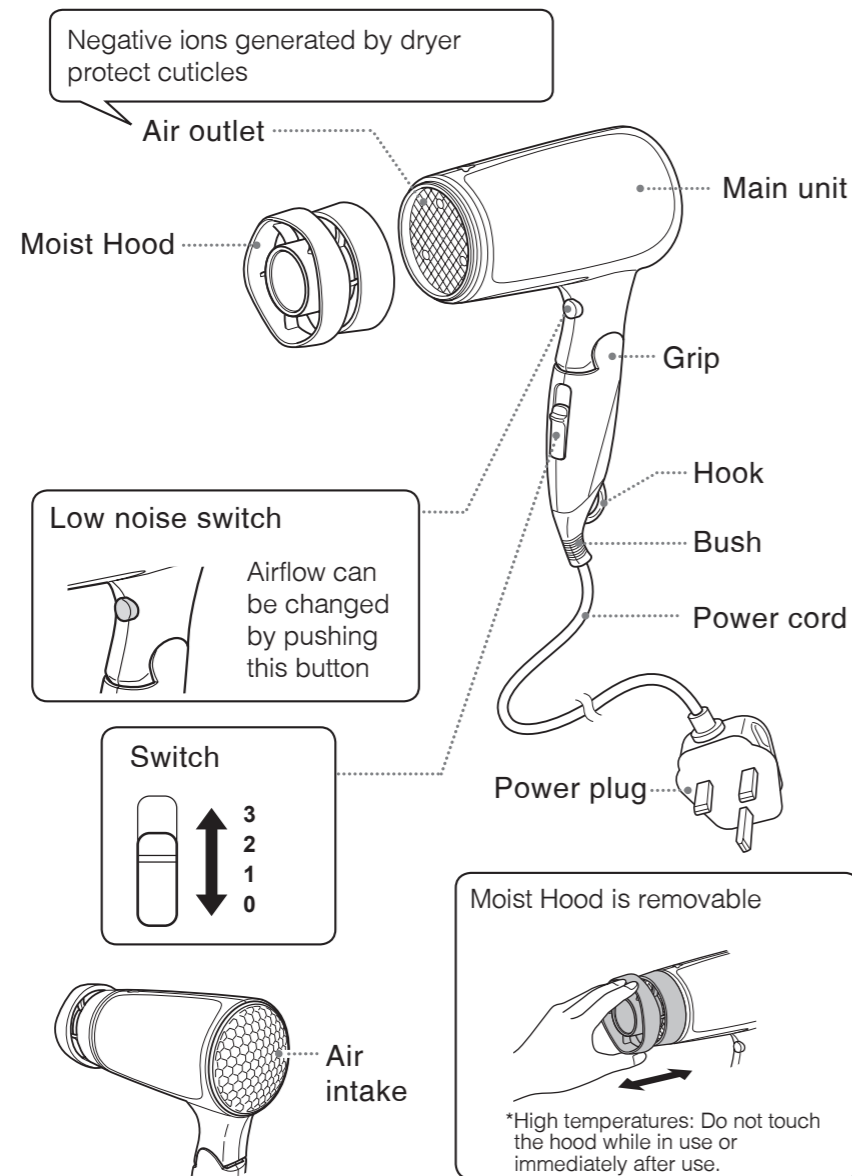

Safety Warnings

- Always use with AC220-240V.
- Before use, make sure that power cord, plug and main unit are not damaged.
- After use, turn off and unplug the unit.
- Do not leave the appliance with the power cord wound around the main unit.
- Do not block the air intake or outlet.
- Do not look into the air outlet while it is in use.
- Do not put hairpins or any other foreign objects into the air intake or outlet.
- Do not leave the appliance near bedclothes, paper or inflammable items when it is turned on. Do not use the appliance near gas or any other object that may catch fire.
- Do not immerse the appliance in water or liquid or let it get wet. Do not use the appliance if your hands are wet.
- Do not store the appliance near a bathtub, a place of high humidity or water.
- When the appliance is used in a bathroom, unplug it after use since the proximity of water presents a hazard even when the appliance is switched off.
- For additional protection, the installation of a residual current device (RCD) having a rated residual operating current not exceeding 30 mA is advisable in the electrical circuit supplying the bathroom. Ask your installer for advice.
- If the appliance does not operate normally, immediately turn it off and unplug it.
- Do not attempt to disassemble or repair the appliance. Leave repairs to an authorized repair technician. If the supply cord is damaged, it must be replaced by the manufacture, its service agent, or similarly qualified persons in order to avoid a hazard.
- This appliance is not intended for use by persons (including children) with reduced physical, sensory or mental capabilities, or lack of experience and knowledge, unless they have been given supervision or instruction concerning use of the appliance by a person responsible for their safety.
- Children should be supervised to ensure that they do not play with the appliance.

- Do not use the appliance in a place that is accessible by children. Do not store the appliance in a place where children can reach it.
- Do not rub the air intake too hard. If the air intake is damaged, immediately stop using the unit.
- Do not touch the appliance with any hair-coloring agents.
- Do not drop the unit or subject it to strong shocks. Do not pull the power cord.
- Always hold the hair dryer at least 10cm away from hair. Pay attention so that hair is not pulled into the air intake while in use.
- Clean the air intake regularly (at least once a month). Do not use alcohol, benzoin or nail polish remover to clean the appliance.
- Do not use the appliance for/in a work environment. Do not store it in a location that is accessible by an unspecified large number of people.

Alert: Do not use this appliance near bathtubs, showers, basins or other vessels containing water.



This symbol means do not use this appliance near water.


When folding or unfolding the grip, do not place your fingers on the shaded area.



Specifications			
Product name	Ion Hair Dryer		
Product number	NTID721		
Power Source	AC220-240V, 50/60Hz		
Power consumption	1100-1300W		
Warm air temperature	115 °C (3-Low noise ON, in an ambient temperature of 30 °C)		
Dimensions	257 (H) x 157 (W) x 84mm (D) (Main unit only)		
Weight	490g (Main unit only)	Power cord length	1.7m
Safety features	Overheating prevention device (Thermostat and temperature fuse)		

How to use

 - 1** Insert the power plug into an AC outlet.
Make sure the switch is set to **0** before plugging in the unit.
- 2** Set the switch to **3, 2** or **1** and blow hair with the dryer.
When the "Low noise" switch is ON, the airflow is reduced for use at low noise levels.
 - 3** Suitable for blowing after washing hair.
 - 2** Gentle blowing for easy styling suitable for hair setting.
 - 1** After setting hair with **2**, switch mode to **1** and apply cool air for 10 to 15 seconds to maintain a hair setting for a longer period of time.
- 3** Set switch to **0** after use, and unplug the unit from the AC outlet.



Maintenance

Turn off and unplug the unit, and only begin maintenance when it is cooled down.

Main unit and attachments

Wipe away stains gently with a dry and soft cloth. If stains persist, wipe with a soft cloth immersed in soapy water or neutral detergent diluted with water, only after wringing well.

Air intake

Remove any dust or hair with a vacuum cleaner or a soft cloth that has been soaked in water and tightly squeezed.

Troubleshooting

Issue	Possible cause	Solution
Blows hot and cool air. Sparks can be seen from the air outlet. (Sparks are caused by the operation of the safety device).	Dust or hair is attached to the air intake.	Clean the air intake. If the problem persists, immediately stop using the unit.
	Air intake is blocked.	Use the unit without blocking the air intake. If the problem persists, immediately stop using the unit.
The main unit or hot air is abnormally hot. The inside of the main unit becomes red or generates smoke.	The safety device is not operating normally.	Immediately stop using the unit.
No air blows out.	Power cable is broken.	
Air comes out but stops from time to time.	The power cable is about to get disconnected.	
The end of the power cable or power plug is deformed or damaged. The power cable is twisted and does not return properly.	The power cable is about to get disconnected.	
A foreign object can be heard moving inside the main unit.		
Power plug is abnormally hot.	The plug is connected to the AC outlet in a loose manner.	The AC outlet may have a problem. Consult an electronics appliance store.

For the following people, the effect of negative ions may not readily appear:
*People with curly hair, twisted hair, thin and soft hair, or short hair.
*People with recently straightened hair or semi-wet hair.