NobbybyTESCOM

User Manual

Negative lons 2 ways Brush Hair Iron



- Before use, please read this manual and be sure to use the iron properly.
- The manufacturer assumes no responsibility for the iron when it is used in ways other than the proper method described in this manual. In particular, be sure to read the Safety Warnings.
- Store the manual in a location where it can be easily accessed at any time.

Safety Warnings

- Before using the appliance, check that it is compatible with the power supply in your locality.
- Before using the appliance, ensure that there is no damage to the power cord and plug or to the main unit.
- Do not let the appliance fall or sustain impact.
- Do not pull on the power cord. Do not coil the power cord around the main unit. • After use, be sure to turn off the switch and remove the power plug from the outlet.
- When the appliance is connected to the power supply, never leave it unattended.
- Do not soak the appliance or wet it with water or other liquid. Do not handle the appliance with wet hands.
- Do not store the appliance in areas with high humidity or near water.
- Do not use the appliance within reach of children. Do not store the appliance within reach of children.
- Do not place the appliance on bedding, paper, vinyl, or any other material that is flammable or intolerant to heat. Do not use the appliance near gas or flammable fuels. After using the appliance, wait until it has cooled completely before storing it.
- Do not use the appliance on wet hair.
- Do not apply the iron bars to the same part of the hair for more than 10 seconds. • Do not use the appliance on hair to which perming or straightening solution
- has been applied. • The appliance is not intended for business use. Keep it away from unspecified
- usage by a large number of people. • Never apply alcohol, benzine, or enamel remover.
- If the iron bars do not become hot or if the appliance displays any other
- abnormalities, immediately turn off the switch and unplug the appliance.
- The appliance must only be disassembled by an authorized repair engineer. • This appliance is not intended for use by persons (including children) with reduced physical, sensory of mental capabilities, or lack of experience and knowledge, unless they have been given supervision or instruction concerning
- use of the appliance by a person responsible for their safety.. • Always place the appliance with the stand, if any, on a heat-resistant, stable flat surface.

How to use

How to use the hair iron

- With the iron bars closed, slide the mode selector switch to CURL or STRAIGHT.
- Insert the power plug into an outlet. Do so after ensuring the main switch is OFF.
- 3 Slide the main switch to 140°C, 160°C, or 190°C. Select the correct temperature for your hair type. Note that the tips of your hair are particularly delicate. Until you become accustomed to using the appliance, we recommend using the lower temperature settings. When the temperature reaches the set level, the relevant light stops flashing and remains lit.
- After use, slide the main switch to OFF and disconnect the power plug from the outlet. When disconnecting the plug from the outlet, grasp the plug rather than the cord.
- B Wait until the appliance has completely cooled down and store it in a location with low humidity. Store the appliance with the iron bars closed and the mode selector switch in the CURL position.

▲ Caution

Hair arrangement

STRAIGHT

Straightening

- Take a 5 to 6 cm wide bunch of hair and sandwich it in the center of the iron bars.
- 2 Pinch the finger supports to close the iron bars and then slowly slide the hair iron along the hair from the roots toward the ends, keeping it parallel to the direction of the hair.

If the hair becomes caught, start over. Repeat this process a few times depending on the level of curliness of the hair.



- 3 Finish by tidying up the hair with styling products. * This hair iron is intended to temporarily straighten curly hair. It is not designed to straighten frizzy hair.

• Children should be supervised to ensure that they do not play with the appliance.

• If the supply cord is damaged, it must be replaced by the manufacturer, its service agent, or similarly qualified persons in order to avoid a hazard.



be used near

water, such as

Do not use this appliance near bathtubs, showers, basins or other vessels containing water. When the hair iron is used in a bathroom, unplug it after use since the proximity of water presents a hazard even when the hair iron is switched off.

product must not For additional protection, the installation of a residual current device (RCD) having a rated residual operating current not exceeding 30 mA is advisable in the electrical circuit baths or basins with shower water. supplying the bathroom.

/!\ BURN HAZARD

completely cooled.


Keep appliance out of reach from young children, particularly during use and cool down. The part indicated in color in the picture becomes hot, so do not touch it when the appliance is in use or before it has

• Coil the hair around the brush no more than one full turn.



• Take care about where you place your hands while using the brush to ensure your hair does not become entangled.

• If your hair becomes entangled in the brush, immediately turn off the switch and unplug the appliance, and then use a thin stick or similar to untangle your hair little by little.

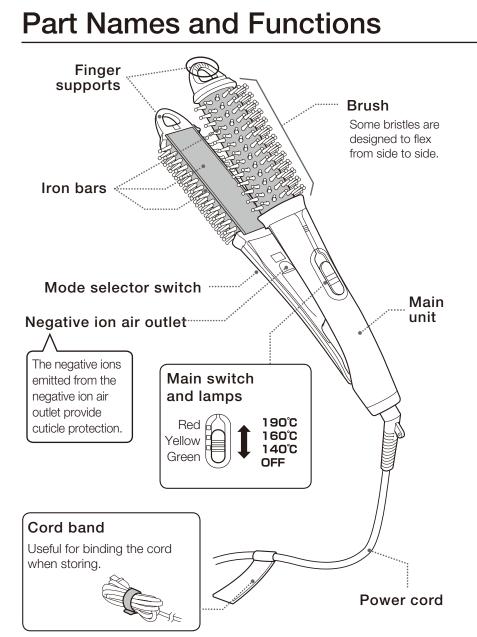

Mode selector switch Back of main unit CURL STRAIGHT

Auto power-off function

- The power turns off automatically after about 30 minutes. * Even when the power is turned off, the switch remains in the ON
- the power plug.

Specifications		
Product number	NTIR1832	
Power Source	100-240V~ 50-60Hz	
Power consumption	59-62W	
Power cord length	1.7m	

Product Maintenance


Before cleaning the appliance, turn off the switch, lisconnect the power plug from the outlet, and let it cool down

Wipe away stains with a dry soft cloth. To clean off difficult dirt, immerse a soft cloth into soapy water or neutral detergent diluted with water, wring it dry and wipe away the dirt.

Troubleshooting


Issue	Possible caus
There is an odor when using the appliance for the first time.	It is not a failure; this is simply due to the heat produced by th heating components
There does not appear to be any negative ion effect.	The effect of negati for users with the fo · Frizzy hair · ve · Short hair · na
There are other abnormalities or failures.	Immediately stop us with the store of pu


In order to download this user manual, please visit the TESCOM website below. http://www.tescom-japan.co.jp/global/

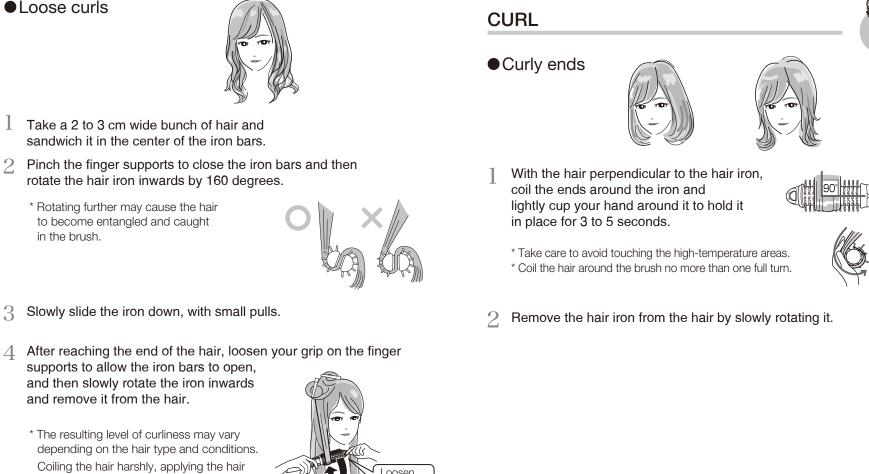

iron for extended periods, or using any other techniques aimed at increasing curliness may damage the hair.



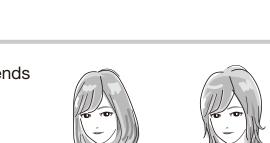

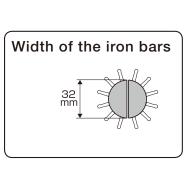

position. Be sure to slide the switch to OFF before disconnecting

