


Operating Instructions

Negative ion multi hair iron

NTIR2610

For household use

 - Before operating this unit, please read these instructions completely. The manufacturer will not be responsible for any consequence caused by incorrect usage, which is not given in the Operating Instructions. Make sure to read the "Safety Warning".
- Please keep the Operating Instructions at a place where the user can see at any time.

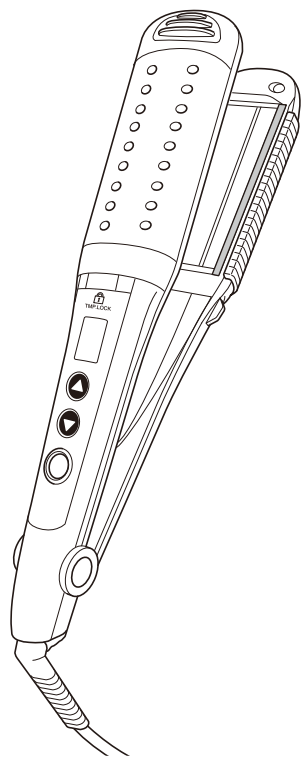

Safety Warning

- Before plugging the iron in, make sure that the voltage of the outlet is between AC 100-240V.
- Before using the iron, make sure that there are no defects in the cord, plug, or main unit.
- Take care not to drop the product or let it bang against anything. Do not tug the cord.
- After use, turn off the switch and unplug the unit.
- Do not immerse the unit in water or other liquids, or let it get wet. Do not use it with wet hands.
- Do not use or store it near the bathtub or in other areas of high humidity or near water.
- Use the product out of reach of children. Store the product out of reach of children.
- Do not lay the product on bedding, paper, or other combustible materials. Do not use it near gas or other combustible fuels. After using the product, let it cool before you put it away.
- Use the product on hair without applying any styling products. Do not apply the iron to the same section of hair for more than 5 seconds.
- Do not use the iron while a permanent wave agent is applied to your hair.
- Do not use the iron for business. Also, do not place it in a location accessed by the public.
- Do not use alcohol, benzene or remover to clean your iron.
- If the unit does not heat up or if any other malfunction occurs, turn it off and unplug it.
- This product should be disassembled or repaired only by an authorized repair technician.
- This appliance is not intended for use by persons (including children) with reduced physical, sensory or mental capabilities, or lack of experience and knowledge, unless they have been given supervision or instruction concerning use of the appliance by a person responsible for their safety.
- Children should be watched over to make certain they do not play with the appliance.

 
- If the supply cord is damaged, it must be replaced by the manufacture, its service agent, or similarly qualified persons in order to avoid a hazard.

WARNING: Do not use this appliance near bathtubs, showers, basins or other vessels containing water.




This symbol means do not use this appliance near water.

- The iron becomes very hot. Do not touch the shaded area shown in the illustration during and immediately after use of the iron. Also, do not allow the area to touch your skin.

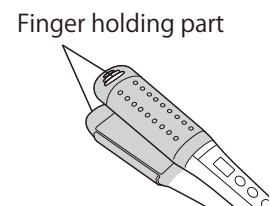


 - Use the iron after making it semi-dry after using shampoo. In addition, if you hear "crackling" sound while sandwiching your hair in the iron, use it after drying it a little more.

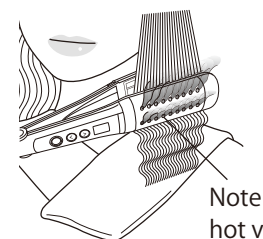

- Always use the iron with the moisture vaporization holes facing outward.

 Names and functions of each part

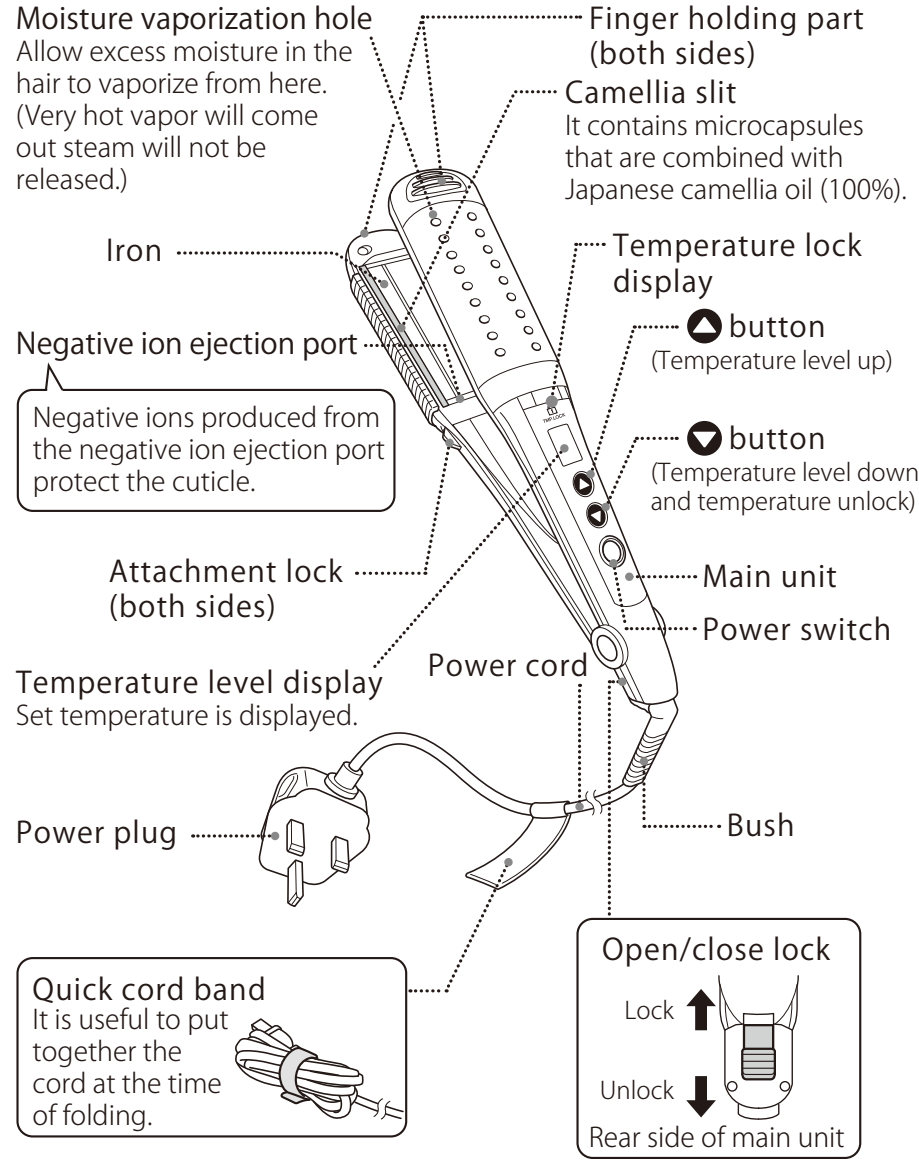


Automatic power OFF function

The power automatically goes off in about 30 minutes after turning the power ON. About ten seconds before the power goes off, the temperature display will flicker and will produce a sound to notify. Press the button while the notification is given to extend the power supply for another 30 minutes.

Accessories

 - Volume up attachment
- Styling attachment
- Curl attachment
- Curl brush attachment
- Stand
- Pouch for attachment

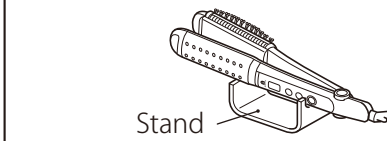

Specification


Product name	Negative ion multi hair iron		
Product number	NTIR2610		
Power supply	AC 100-240V 50/60Hz		
Power consumption	47-49 W	Power code length	1.7m
Temperature of the iron section	200 °C (when ambient temperature is 30°C)		
Dimensions	Height 85 × width 292 × depth 42mm (body only)		
Weight	485g (body only)		

How to use

Fixing and removing the attachment

To fix and detach the attachments, unplug the power cord and make sure that the iron is completely cool.

 The attachments are fixed to the lower plate side of the iron.




Fix the attachments properly.




How to fix

 - Hold the fixing and detaching part of the attachment.
- Insert the attachment to fit into the groove of at both ends of the lower the plate and slide until you hear a "click" sound.

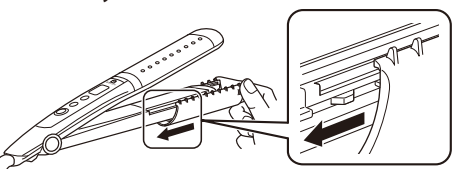

How to remove

 
Hold the attachment fixing and removing part and pull out while pressing the attachment lock on both sides of the body.

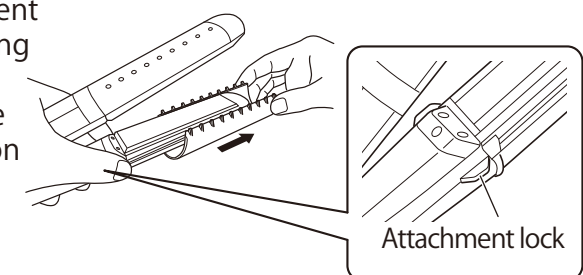

How to use the hair iron

- Slide the OPEN/CLOSE lock while the iron part is closed by hand, to set to OPEN (unlocked).

 The appliance will malfunction if you turn ON power while it is closed.

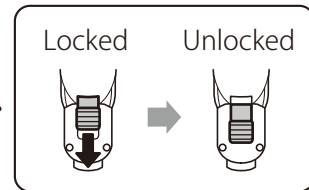

- Fix the attachment if you want to use it.

- Insert the power plug into a plug socket.

- Press and hold the ON/OFF switch for about 2 seconds.

A beep will be audible and the temperature level indicator will flicker to show the set temperature (135°C when using for the first time, and the previously set temperature from the second time.)

- Press the (temperature level up) or (temperature level down) button to set a temperature level.

Use	Condition of hair on which it can be used	Temperature
Making the hair curly	Semi-dry and damp hair	140°C to 200°C
Dry hair	Dry hair	100°C to 200°C
Hair arrangement	Dry hair	100°C to 200°C

You can select settings from 21 steps of 5 °C each within the range of 100 °C to 200 °C.

※ Adjust the set temperature depending on the hair quality. Pay attention while using on tips of hair, as they are tender. We recommend that you use it at low temperature until you get accustomed to using it.

When the set temperature is reached, the indicator will change from flickering to full glow and a "beep" sound will be produced to notify you. The temperature will rise to about 100 °C in 30 seconds (when temperature is set at 200 °C and ambient temperature is 30 °C).

- Automatic temperature lock function
After about 5 seconds after the final operation, the temperature lock indicator will turn ON, a "beep" sound will be heard, and the temperature setting will automatically lock. A temperature lock mark will also be displayed on the temperature level display part.

Method to unlock the temperature setting
When you press the button twice, a "beep" sound will be heard and the temperature setting will be unlocked.

 


- After use, turn off the power switch by pressing for about 2 seconds and unplug the unit.

When removing the power plug from the socket, hold the power plug.



- After the unit is completely cool, slide the OPEN/CLOSE lock while the iron part is closed by hand to set to LOCK, and keep in a less humid place.

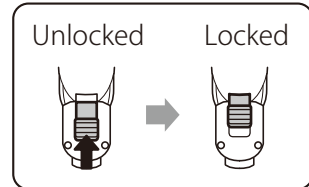

Note

 
- Do not keep for a long time with the switch ON.
- Do not wrap the power cord around the unit. Doing so may break the power cord.
- Do not touch with the hand with hair coloring agent. The paint may peel off.
- Always use stand when keeping the unit with the power switch on.

Maintenance

Turn off the power, remove the power plug and allow the appliance to cool down to clean.

Body and curl attachment

Wipe off dirt with a dry and soft cloth. If the dirt does not fall off easily, soak a soft cloth in "soapy water" or "water with a mild neutral detergent" and squeeze it well, and wipe with it.

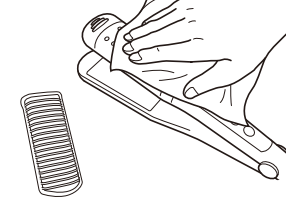

Volume up attachment, styling attachment and curl brush attachment

- Remove dust and hair with a soft brush.

- Wash with water and allow to thoroughly dry.



Troubleshooting

Occurrence	Reason	Measures
Smells when using for the first time.	It is not a malfunction. It is caused by heating of heating element.	Use it as is.
Power cord is twisted and does not return to its original state.	Power cord is broken.	Please discontinue use immediately.
If you rotate or bend the power cord, power will turn on and off.		
Burning smell.		
Sometimes the iron part does not heat up.		
The temperature level indicator disappears during use.		
Other failures and malfunctions.		
Power plug is abnormally hot.	Plug is loose.	It may be caused by socket. Please consult your local electronics store.
Effect of negative ions cannot be felt.	The desired effect may not be evident in the following people. People with moist curly hair, very curly hair, thin/soft/moist hair.	
"Hiss" sound is produced from negative ion ejection port.	This sound is produced by negative ions. It is not a malfunction.	Use it as is.