 




Name and function of each component

*The specifications of this product and its components are subject to change without notice.

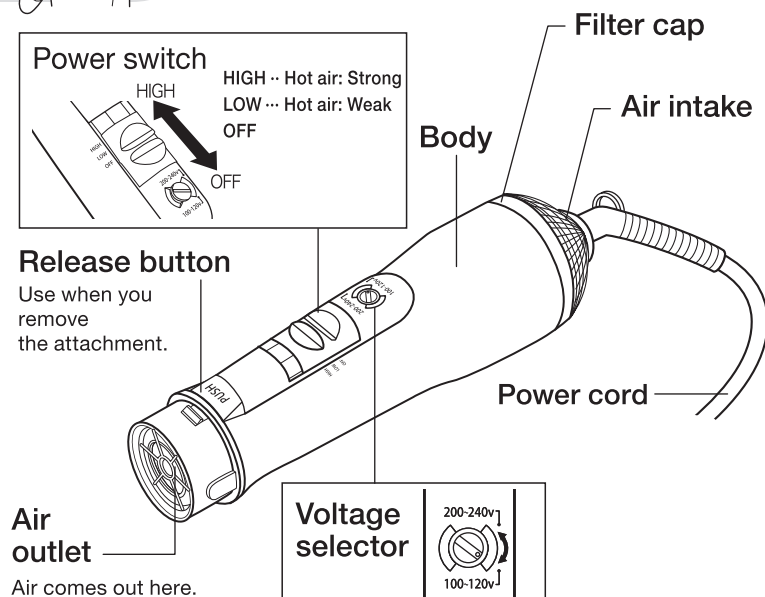

■Accessories

Attachment (Wide cushion brush)

 
For drying, blowing or curling the end of your hair after shampoo. The anti-static agent reduces the generation of static electricity.

High temperature part.
It becomes hot,
so please be careful.



C-2 converting plug

Use it when the outlet shape is type C.

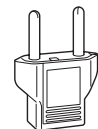

Storage bag

Convenient for traveling.

- * Store it after the body and the attachment have cooled down completely.
- * Do not store anything other than the body and accessories. Storing hair pins or the like will get into the body and become a cause of fire or an electric shock.

List of specified power voltages and plugs around the world




How to use

1 Attach the attachment (Wide cushion brush) to the body.

Align the female part on the attachment and the male part of the body, and insert them until they click.

■How to remove

 Pull off the attachment while pushing the release button.

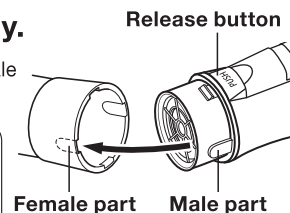


2 Check the power voltage and the shape of the outlet.

Caution

- Make sure to check the power voltage and the plug at the site. (The attached “List of specified power voltages and plugs around the world” is for reference only. The power voltage and plugs might change from what is written and also, power voltage and plugs may vary among regions even in the same country.)

3 Adjust the power voltage switch to “100-120V” or “200-240V”.

 Make sure to rotate the switch until it stops, by using a coin or the like.

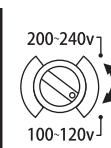


4 Insert the plug into the outlet.

Insert it after you confirm that the power switch is “OFF”.


■When the outlet shape is type C (C-2)

 Use the accessory C-2 converting plug.

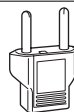

How to use

 5 Slide the power switch to “HIGH” or “LOW”.

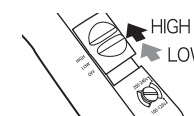


6 Blow the air towards your hair.



7 Slide the power switch to “OFF” and pull out the plug from the outlet after use.

 When pulling out the plug, hold the body of the plug.

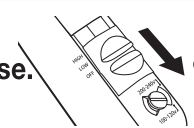

8 Store it in a low humidity place after it has cooled down completely.



Care and Maintenance

Perform care after you slide the power switch to “OFF”, unplug it and completely cool it down.

Body

 
Wipe dirt off with dry, soft cloth.

■When dirt does not come off

Use a cloth dipped in “soapy water” or “watered down mild detergent”, squeeze well and wipe.

Air intake and filter cap

1. Rotate the filter cap to the left until the ● mark aligns with the ▼ mark on the body, and remove the filter cap.
2. Remove dust, hair and such with a soft tooth brush, etc. (The exterior and interior of the filter cap and the air intake)
3. Align the ● mark on the filter cap with the ▼ mark on the body and insert it, then rotate it to the right until it aligns up with the ● mark on the body.

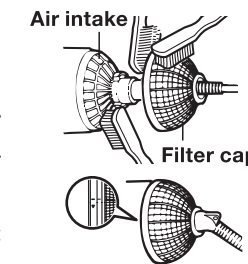

Attachment (Wide cushion brush)

 
1. Remove dust, hair, etc. with a brush or the like.
2. Wash the attachment and use it after it is dried completely.

Dual voltage Hair Styler

Product number: BI2000U

Instruction manual

Thank you for buying our product. Before use, please make sure to read this instruction manual and use it properly. After you have finished reading this manual, please store it in a place accessible by users.

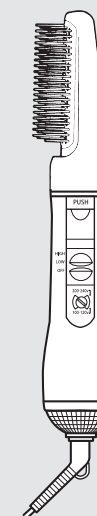

Contents



Safety Warnings 1 · 2 · 3



Troubleshooting 4



Name and function of each component..... 5
How to use 6 · 7



Care and Maintenance 8

Safety Warnings

IMPORTANT SAFEGUARDS

When using electrical appliances, basic safety precautions should always be followed including the following:

KEEP AWAY FROM WATER

READ ALL INSTRUCTIONS BEFORE USE

DANGER

As with most electrical appliances, electrical parts are electrically live even when the switch is off.

To reduce the risk of death by electric shock:

- 1. Always “unplug” it immediately after using.
- 2. Do not use while bathing.
- 3. Do not place or store this appliance where it can fall or be pulled into a tub or sink.
- 4. Do not place in or drop into water or other liquid.
- 5. If an appliance falls into water, “unplug it” immediately. Do not reach into the water.


WARNING

To reduce the risk of burns, electrocution, fire, or injury to persons:

- 1. An appliance should never be left unattended when plugged in.
- 2. Close supervision is necessary when this appliance is used by, on, or near children or individuals with certain disabilities.
- 3. Use this appliance only for its intended use as described in this manual. Do not use attachments not recommended by the manufacturer.
- 4. Never operate this appliance if it has a damaged cord or plug, if it is not working properly, or if it has been damaged or dropped into water. Return the appliance to a service center for examination and repair.
- 5. Keep the cord away from heated surfaces. Do not wrap the cord around the appliance.
- 6. Never block the air openings of the appliance or place it on a soft surface, such as a bed or couch, where the air openings may be blocked. Keep the air openings free of lint, hair, and the like.
- 7. Never use while sleeping.
- 8. Never drop or insert any object into any opening.
- 9. Do not use outdoors or operate where aerosol (spray) products are being used or where oxygen is being administered.
- 10. Do not use an extension cord with this appliance.
- 11. Do not direct hot air toward eyes or other heat sensitive areas.
- 12. Attachments may be hot during use. Allow them to cool before handling.
- 13. Do not place appliance on any surface while it is operating.
- 14. While using the appliance, keep your hair away from the air inlets.
- 15. Do not use with voltage converter.

SAVE THESE INSTRUCTIONS

- After use, turn off and unplug the unit.
- Pull on the power plug instead of the power cord when unplugging the styler.
- Before use, check the voltage used in the region where you are located, and set the voltage switch accordingly.
- Do not use the styler if the inside of the main unit turns red, if it generates smoke, or if you hear the sound of foreign matter moving inside it.
- Regarding the power cord, do not damage, forcibly bend, twist, pull, load any heavy weight onto, bring near to any hot object, pinch, modify, or bundle it when using the styler. Do not wrap the cord around the main unit.
- Long-term use or misuse may cause the power cord to become damaged. Do not use it if:
 - The styler sometimes does not blow air;
 - The power cord remains twisted;
 - The base of the power cord or plug is deformed or damaged; or
 - The power plug is loose in the AC outlet.
- If the supply cord is damaged, it must be replaced by the manufacturer, its service agent, or similarly qualified persons in order to avoid a hazard.
- Do not leave the styler with the power switch turned ON. Do not put the styler on anything flammable or sensitive to heat, such as a mattress, paper, or plastic bags.
- Do not use it on babies. Do not have a child close by when using it. This styler should be stored out of reach of children.
- This appliance is not intended for use by persons (including children) with reduced physical, sensory or mental capabilities, or lack of experience and knowledge, unless they have been given supervision or instruction concerning use of the appliance by a person responsible for their safety. Children should be supervised to ensure that they do not play with the appliance.
- Do not use the styler near any flammable material, such as gasoline, benzine, thinner, gas, or hair cosmetics agents. Do not use the styler with hairspray.
- Do not block the air intake or outlet.
- Do not put hairpins or any other foreign objects into the air intake or outlet.
- Examine the attachment before attaching it, and make sure that there are no foreign objects inside.
- Do not look into the air outlet while it is in use.
- Keep the air intake at least 10 cm away from hair to prevent hair from being sucked into the styler during use.

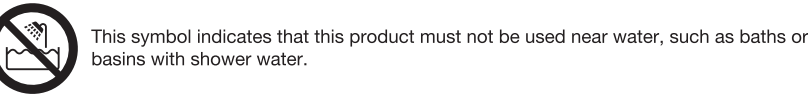

Do not use this appliance near bathtubs, showers, basins or other vessels containing water.

When the appliance is used in a bathroom, unplug it after use since the proximity of water presents a hazard even when the appliance is switched off.

For additional protection, the installation of a residual current device (RCD) having a rated residual operating current not exceeding 30 mA is

- advisable in the electrical circuit supplying the bathroom. Ask your installer for advice.
- Do not use the styler with wet hands.
 - Do not place the styler in water or pour water on it. Store it in a place with low moisture.
 - Do not modify the styler. No one other than repair engineers should disassemble or repair the styler.
 - Clean the air intake and inlet net at least once a month.
 - Do not allow too much hair to wrap around the attachment.
 - Do not touch any attachment or the air outlet during or immediately after use, and also avoid any accidental contact with your skin, as the attachments and the outlet will be hot.
 - The styler is intended for the hair-drying and styling of human hair. Do not use it for other purposes, such as for pet hair.
 - Do not let the styler fall or sustain impact. Do not use it if it has been damaged.
 - Do not touch the styler with hair dye stained hands. Never apply alcohol, benzine, or enamel remover.
 - Do not apply hairstyling products onto the attachment directly.
 - The styler is not intended for business use. Keep it away from unspecified usage by a large number of people.

 
OPERATING INSTRUCTIONS

This appliance has a polarized plug (one blade is wider than the other). As a safety feature, this plug will fit in a polarized outlet only one way. If the plug cannot be inserted fully in the outlet, reverse the plug. If it still does not fit, contact a qualified electrician. Do not attempt to defeat this safety feature.

This appliance is also provided with an ALCI protective device that may make the appliance inoperable under some abnormal conditions (such as immersion of the appliance). If the appliance becomes inoperable, return the appliance to a service center for examination and repair. Every time using the appliance, check the safety plug to verify it is in proper working order. Plug the appliance in an electrical outlet and press the test button. The hair dryer should stop immediately.

To resume operation, press the reset button.

This hair dryer is equipped with an automatic overheating protective device. If the hair dryer overheats, it will switch to cool air mode. Switch off the hair dryer and unplug it from the household outlet. Allow it to cool down for a few minutes before using it again. Check that no fluff, hair etc. is in the air inlets and outlets before switching it on again. The thermostat will automatically reset.

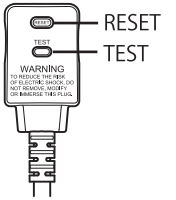

Troubleshooting

Problems	Possible causes	Solutions
The air fluctuates between hot and cold.	Dust or hair is attached to the air intake	Remove dust, hair, etc. with a brush or the like. If the problem lingers, please stop using it right away.
Sparks are seen in the air outlet. (The sparks are due to the safety feature.)	You are blocking the air intake.	Use it without blocking the air intake. If the problem lingers, please stop using it right away.
The body or the air is abnormally hot.	The safety feature is not working properly.	Please stop using it right away
Air does not blow.	The power cord is broken.	
Air sometimes blows and sometimes does not.	The power cord is about to break.	
The end of the power cord or plug is deformed or damaged.		
The power cord became kinked.		
The plug is abnormally hot.	The outlet is not holding the plug tight enough.	There is a possibility that the outlet itself causes the problem. Please contact your local electronics store.

Specifications	Product name	Dual voltage Hair Styler	Length of the power cord	1.8m
	Product number	BI2000U	Mass (weight)	235g (Without attachment)
	Power source	AC100 - 120V AC200 - 240V Switchable	Accessories	Wide Cushion brush C-2 converting plug Storage bag List of specified power voltages and plugs around the world
	Power consumption	480W (100/200V) 700W (120/240V)		
	Hot air temperature	90°C (100/200V) 110°C (120/240V) (When room temperature is 30°C and the attachment is removed.)	Safety device	Over-heating prevention device (a thermostat and a thermal fuse)

Manufactured by
TESCOM DENKI CO., LTD.

Distributed by
Eden Marketing Corp.

901S Alameda st., Los Angeles, CA 90021 U.S.A
Customer Service by Eden Marketing Corp.
1-800-525-6732