


User Manual

Hair Styler


NACC10

For household use only

 - Before use, please read this manual and be sure to use the appliance properly. The manufacturer assumes no responsibility for the appliance when it is used in ways other than the proper method described in this manual. In particular, be sure to read the Safety Warnings.
- Store the manual in a location where it can be easily accessed at any time.

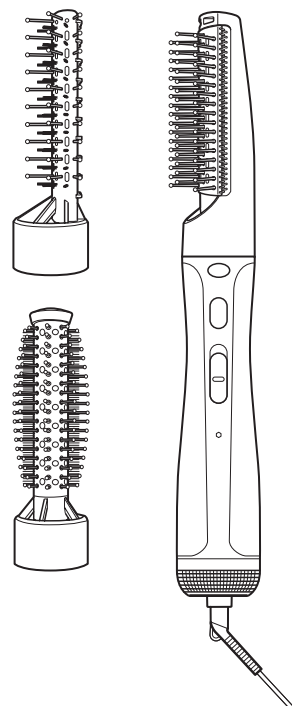

Part names and functions

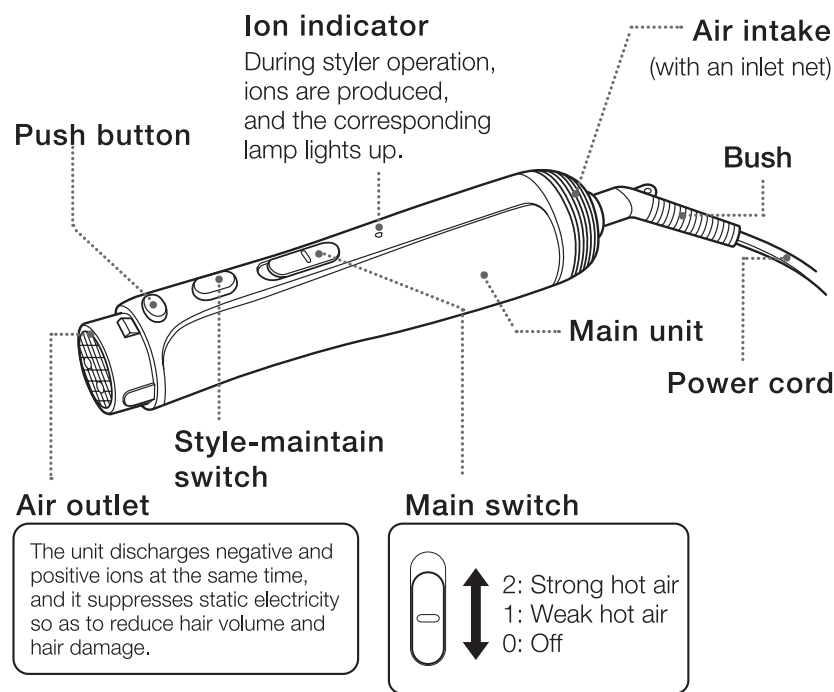 

Attachment

- **Catch Blow Brush**
Used to blow hair
- **Curl Iron Brush**
Used to curl hair
- **Volume Up Brush**
Used to lift up hair roots
- * Do not touch any attachment during or immediately after use, as such will be very hot.

Safety Warnings

 
- After use, turn off and unplug the unit.
- Pull on the power plug instead of the power cord when unplugging the styler.
- Make sure to use the styler with a power supply of AC220-240V.
- Do not use the styler if the inside of the main unit turns red, if it generates smoke, or if you hear the sound of foreign matter moving inside it.
- Regarding the power cord, do not damage, forcibly bend, twist, pull, load any heavy weight onto, bring near to any hot object, pinch, modify, or bundle it when using the styler. Do not wrap the cord around the main unit.
- Long-term use or misuse may cause the power cord to become damaged. Do not use it if:
 - The styler sometimes does not blow air;
 - The power cord remains twisted;
 - The base of the power cord or plug is deformed or damaged; or
 - The power plug is loose in the AC outlet.If the supply cord is damaged, it must be replaced by the manufacturer, its service agent, or similarly qualified persons in order to avoid a hazard.
- Do not leave the styler with the power switch turned ON. Do not put the styler on anything flammable or sensitive to heat, such as a mattress, paper, or plastic bags.
- Do not use it on babies. Do not have a child close by when using it. This styler should be stored out of reach of children.
- This appliance is not intended for use by persons (including children) with reduced physical, sensory or mental capabilities, or lack of experience and knowledge, unless they have been given supervision or instruction concerning use of the appliance by a person responsible for their safety. Children should be supervised to ensure that they do not play with the appliance.
- Do not use the styler near any flammable material, such as gasoline, benzene, thinner, gas, or hair cosmetics agents. Do not use the styler with hairspray.
- Do not block the air intake or outlet.
- Do not put hairpins or any other foreign objects into the air intake or outlet.
- Do not look into the air outlet while it is in use.
- Keep the air intake at least 10 cm away from hair to prevent hair from being sucked into the styler during use.



This symbol indicates that this product must not be used near water, such as baths or basins with shower water.

Do not use this appliance near bathtubs, showers, basins or other vessels containing water. When the appliance is used in a bathroom, unplug it after use since the proximity of water presents a hazard even when the appliance is switched off. For additional protection, the installation of a residual current device (RCD) having a rated residual operating current not exceeding 30 mA is advisable in the electrical circuit supplying the bathroom. Ask your installer for advice.

- Do not use the styler with wet hands.
- Do not place the styler in water or pour water on it. Store it in a place with low moisture.
- Do not modify the styler. No one other than repair engineers should disassemble or repair the styler.
- Clean the air intake and inlet net at least once a month.
- Do not allow too much hair to wrap around the attachment.

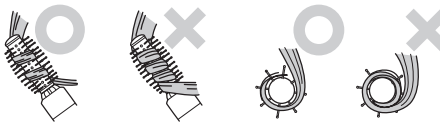

- Do not touch any attachment or the air outlet during or immediately after use, and also avoid any accidental contact with your skin, as the attachments and the outlet will be hot.
- The styler is intended for the hair-drying and styling of human hair. Do not use it for other purposes, such as for pet hair.
- Do not let the styler fall or sustain impact. Do not use it if it has been damaged.
- Do not touch the styler with hair dye stained hands. Never apply alcohol, benzene, or enamel remover.
- Do not apply hairstyling products onto the attachment directly.
- The styler is not intended for business use. Keep it away from unspecified usage by a large number of people.

How to use

- Add the attachment to the main unit.**
(* When attaching it, make sure to check for any foreign matter inside the unit.)
Align the concave part of the attachment with the convex part of the main unit, and push until you hear a clicking sound.

● How to detach it
While maintaining pressure on the push button, pull the attachment away.
- Insert the power plug into an AC outlet.**
- Set the main switch to “2” or “1” to comb and blow your hair.**
● Using the style-maintain switch
Cool air comes out when the switch is pressed. Before removing the brush from the hair, apply cool air to the hair for 10–15 seconds to help ensure that the hair is set for a long time.
- After use, set the main switch to “0” and unplug the styler.**

Maintenance

 
Set the main switch to “0” and unplug the unit from the AC outlet before performing maintenance.

Main unit

Wipe away any dirt with a dry soft cloth. To clean off difficult dirt, immerse a cloth in soapy water or neutral detergent diluted with water, wring it dry, and wipe away the dirt.

Air intake • inlet net

- ① To remove the net from the main unit, turn the inlet net counterclockwise until the mark on the net is aligned with on the main unit.
- ② To clean the air intake and the inlet net (internally and externally), use a soft brush to remove dust and hair.
- ③ Insert the inlet net into the main unit with the mark on the net aligned with on the main unit, and turn the net clockwise until is aligned with the same mark on the unit.

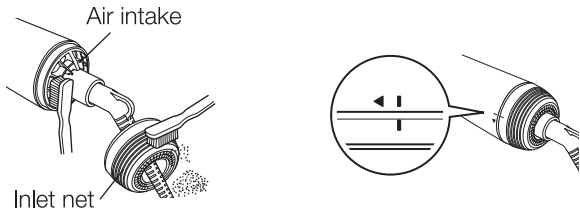

Attachment

- ① Use a brush to remove dust and hair.
- ② Wash it in water, and leave it out to dry completely.

Troubleshooting

Issue	Possible cause	Solution
Hot or cool air comes out unintentionally. A spark appears from the air outlet. (A spark is caused by the safety device.)	Dust and hair have become attached to the air intake. The air intake is blocked.	Maintain the air intake. Remove any objects that block the air intake. If this does not eliminate the problem, stop using the styler.
The main unit or hot air is abnormally hot. The inside of the main unit becomes red or generates smoke.	The safety device is not operating normally.	Immediately stop using the styler.
No air blows out.	The power cord has been broken.	
Air comes out but stops from time to time.	The power cord is about to break.	
The base of the power cord or plug is deformed or damaged.		
The power cord remains twisted.		
Something sounds as though it's moving around within the main unit.		
Power plug is abnormally hot.	The plug is connected to the AC outlet in a loose manner.	The AC outlet may have a problem. Consult an electronics appliance store.

The effect of ions tends to be ineffective if the hair is charged with a small amount of static electricity or if the use environment does not provide optimum conditions.


使用說明書

俏麗三件式整髮梳


NACC10

家庭用

 - 使用前，請務必詳閱本使用說明書，正確使用本產品。請務必閱讀「安全注意事項」。
- 使用說明書請務必存放於使用者隨時可翻閱之處。

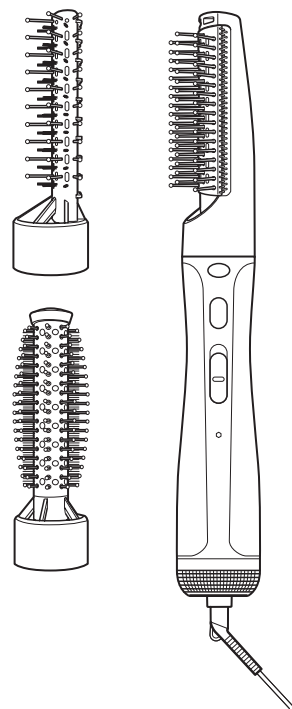

產品部位名稱與作用

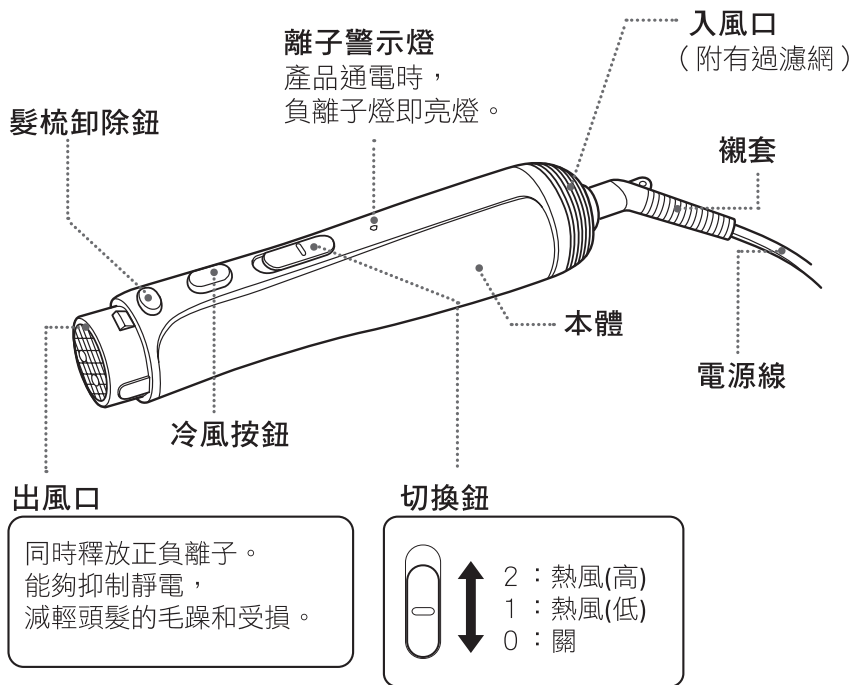 

附屬配件

- 密合整髮梳
輕鬆吹整出想要的造型。
 - 濃密增髮梳
為頭髮造型上效果相當好。
 - 捲髮燙髮梳
使髮根直立時使用。
- ※使用中或剛使用後的配件溫度很高，禁止觸摸。

 
安全注意事項

- 使用後請務必將開關推至「0」，並自插座拔除電源插頭。
- 自插座拔除電源插頭時，請手持插座部位。
- 請務必使用220-240V交流電。
- 機身內部呈現紅色、冒出煙霧，或主機內部有異物晃動發出聲響時，請勿使用。
- 請勿毀損電源線。
使用時請勿過度彎折、扭轉、拉扯、重壓、靠近熱源、夾壓、改造或捆綁。
- 長時間使用或不當使用，可能會導致電源線斷裂，因此下列狀況發生時請勿使用。
 - 使用時出風不順，時有時無。
 - 電源線扭轉後無法復原。
 - 電源線、插頭根部變形或損傷。
 - 插座插入部位鬆動。為避免危險，電源線破損時，請交由經銷商，或具有該類證照之人更換。
- 開關開啟後請勿閒置。請勿放置於耐熱度低的物品上，例如棉被、紙類等易燃物或塑膠袋等。
- 請勿放任孩童單獨使用。不可用於嬰幼兒。請勿於幼兒周遭使用。請勿存放於幼兒伸手可及之處。
- 在使用本產品時，除非於可負責安全之人監督下使用，或經事前指導，否則不可將本產品提供給知覺、精神能力耗弱者（包含孩童）或不具備使用經驗或知識之人使用。因本產品設計並非供上述之人使用的產品。請注意勿讓孩童持本產品嬉戲。
- 請勿於易燃物（汽油、揮發油、稀釋劑、瓦斯、髮膠等）附近使用。請勿與噴霧式髮膠同時使用。
- 請勿遮擋入風口或出風口。
- 入風口或出風口請勿置入髮夾或其他異物。
- 使用中請勿對準出風口查看。使用時，請和頭髮保持距離10cm以上，避免毛髮捲進入風口。



本記號代表本產品不可在近水（浴池、淋浴間等）處使用。

- 手部潮溼時請勿使用。
- 請勿將產品浸水或向產品潑水。請保管於乾燥場所。
- 請勿改裝。除維修技師外，請勿自行拆解或維修。
- 請勤加清潔入風口與過濾網（每月一次以上）。
- 請勿使用整髮梳一次捲起大量的頭髮，或是重疊捲起。
- 使用中或剛使用後的配件與出風口溫度很高，請勿觸摸。
- 除了吹乾頭髮、整理造型之外，請勿挪為他用，亦不可用於寵物身上。
- 請勿摔落或撞擊產品，如已破損，請勿使用。
- 手上沾有染髮劑時，請勿觸摸本產品。請勿使用酒精、揮發油或去光水保養本產品。
- 請勿直接將整髮劑塗在配件上。
- 請勿作為業務用途。此外亦請勿放置於不特定多數人可取用的場所。

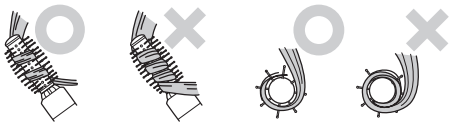

清潔方法

 
請將切換鈕推至「0」並拔除電源插頭，待冷卻後再開始清潔。

本體

使用乾燥的軟布擦拭污垢。
污垢難以擦除時，可將軟布浸泡於「肥皂水」或「以水稀釋的中性清潔劑」中，確實擰乾後再擦拭。

入風口、過濾網

- 將過濾網的●記號往左轉，直到對齊本體的▼記號為止，然後由本體上拆下。
- 灰塵與頭髮等，請利用柔軟的梳子等工具清除。（過濾網的外側、內側、入風口）
- 將過濾網的●記號對齊本體的▼記號嵌入，往右轉直到對齊本體的●記號為止以進行安裝。

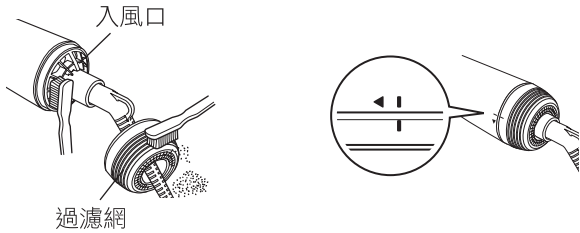

配件

- 灰塵與頭髮等，請利用刷子等工具清除。
- 用水清洗之後徹底乾燥。

疑似故障時

異常現象	可能的原因	處理方法
時而溫風，時而冷風。 出風口冒出火花。 （火花是因為安全裝置啟動所致）	入風口附著了灰塵或頭髮。 入風口阻塞。	請清潔入風口。 剔除灰塵或毛髮後，若仍無法排除問題，請立即停止使用，並洽詢「客服聯絡窗口」。
主機或熱風異常高溫。 主機內部呈現紅色並冒出煙霧。	安全裝置未正常動作。	請立即停止使用。
吹不出風來。	電源線斷裂。	
出風不順，時有時無。	電源線即將斷裂。	
電源線或插頭根部變形或毀損。		
電源線扭轉後無法復原。		
本體內部有異物，移動時發出聲響。		
電源插頭異常發熱。	插入插座部位鬆動。	原因可能在於插座。 請洽詢臨近電器行。

頭髮上帶有的靜電少，或依使用環境，有時離子效果會不明顯。