

NBIC32

For household use only

- Before use, please read this manual and be sure to use the appliance properly. The manufacturer assumes no responsibility for the appliance when it is used in ways other than the proper method described in this manual. In particular, be sure to read the Safety Warnings.
- Store the manual in a location where it can be easily accessed at any time.

 


How to use

Make sure to check the voltage and configuration of the socket.


- Add the attachment to the main unit.**
(* When attaching it, make sure to check for any foreign matter inside the unit.)

Align the concave part of the attachment with the convex part of the main unit, and push until you hear a clicking sound.

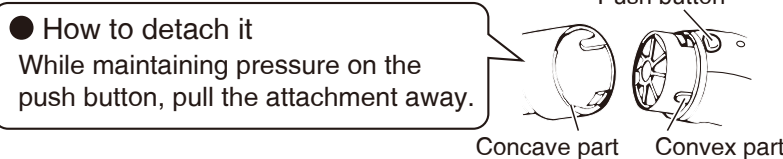

- Set the voltage switch to “100V 120V” or “200V 240V.”**

 
Be sure to turn the switch all the way to the end; use a coin, as necessary.

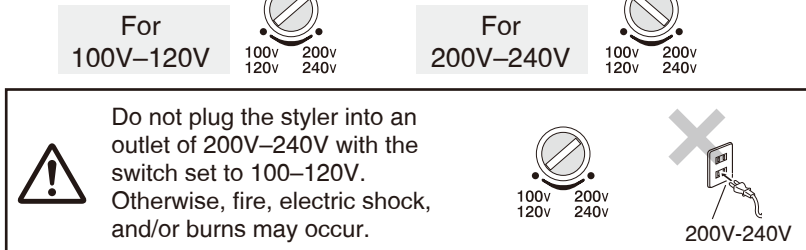

- Insert the power plug into an AC outlet.**

- Set the switch to “2” or “1” to comb and blow your hair.**

 - After use, set the switch to “0” and unplug the styler.**

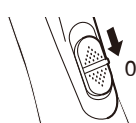

Safety Warnings

- Make sure to use the styler with a power supply of AC100–120V or 200–240V.
- Before use, make sure that power cord, plug and main unit are not damaged.
- After use, turn off and unplug the unit.
- Do not leave the appliance with the power cord wound around the main unit.
- Do not block the air intake or outlet.
- Do not look into the air outlet while it is in use.
- Do not put hairpins or any other foreign objects into the air intake or outlet.
- Do not leave the appliance near bedclothes, paper or inflammable items when it is turned on. Do not use the appliance near gas or any other object that may catch fire.
- Do not immerse the appliance in water or liquid or let it get wet. Do not use the appliance if your hands are wet.
- Do not store the appliance near a bathtub, a place of high humidity or water.
- When the appliance is used in a bathroom, unplug it after use since the proximity of water presents a hazard even when the appliance is switched off.
- For additional protection, the installation of a residual current device (RCD) having a rated residual operating current not exceeding 30 mA is advisable in the electrical circuit supplying the bathroom. Ask your installer for advice.
- If the appliance does not operate normally, immediately turn it off and unplug it.
- Do not attempt to disassemble or repair the appliance. Leave repairs to an authorized repair technician. In the case of a damaged power cord, to avoid danger, only the manufacturer, its agent, or qualified personnel should perform a replacement.
- This appliance is not intended for use by persons (including children) with reduced physical, sensory or mental capabilities, or lack of experience and knowledge, unless they have been given supervision or instruction concerning use of the appliance by a person responsible for their safety.
- Children should be supervised to ensure that they do not play with the appliance.

- Do not use the appliance in a place that is accessible by children. Do not store the appliance in a place where children can reach it.
- Do not use the styler for any purposes other than hair drying and styling. Do not use it for washing hair.
- Do not touch the appliance with any hair-coloring agents. Do not apply hairdressing agents directly to the attachment.
- Do not drop the unit or subject it to strong shocks. Do not pull the power cord.
- Pay attention so that hair is not pulled into the air intake while in use.
- Do not allow too much hair to wrap around the attachment.
- Wait for the unit to cool completely before adding or detaching the attachment. Do not touch the attachment or the air outlet during or just after the use of the styler.
- Clean the air intake regularly (at least once a month). Do not use alcohol, benzin or nail polish remover to clean the appliance.
- Do not use the appliance for/in a work environment. Do not store it in a location that is accessible by an unspecified large number of people.

Alert: Do not use this appliance near bathtubs, showers, basins or other vessels containing water.



This symbol means do not use this appliance near water.

Specifications


Product name	Ionic Hair Styler		
Product number	NBIC32		
Power Source	100V-120V~/200V-240V~ Switchable 50-60Hz		
Power consumption	450W(100/200V)	650W(120/240V)	
Safety features	Overheating prevention device (Thermostat and temperature fuse)		
Dimensions	52 (H) x 209 (W) x 46mm (D) (Main unit only)		
Weight	245 g (Main unit only)	Power cord length	1.7m

Maintenance

Unplug the unit and wait for it to cool before performing any maintenance.

Attachment

 - Remove the styling blow brush from the main unit.
- Use a brush to clean out dust and hair. If you are concerned about staining, detach the brush base and wash it in water. Leave it out to dry completely before attaching it again.

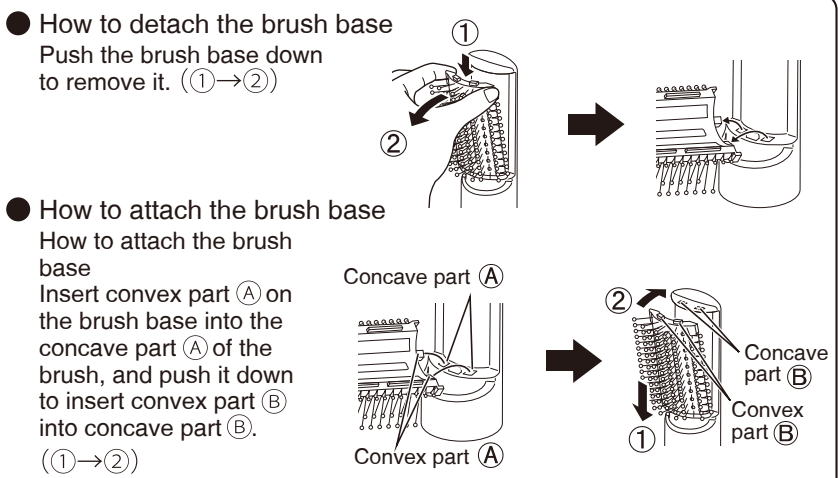


Main unit

Wipe away any dirt with a dry soft cloth. To clean off difficult dirt, immerse a cloth in soapy water or neutral detergent diluted with water, wring it dry, and wipe away the dirt.



 
Part names and functions

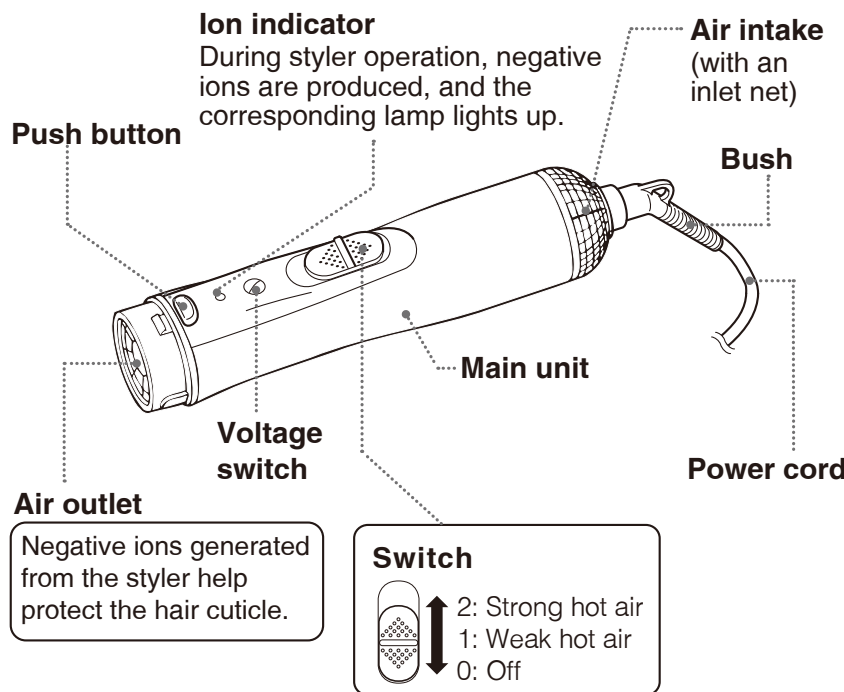

Accessories

- Attachment: Styling blow brush

 * The brush base contains microcapsules with camellia oil.

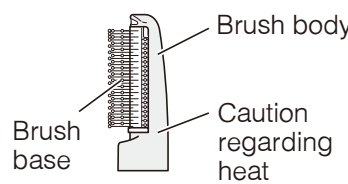


- Traveling pouch



Air inlet, inlet net

 - To remove the net from the main unit, turn the inlet net counterclockwise until the mark on the net is aligned with on the main unit.
- To clean the air inlet and the inlet net (internally and externally), use a soft brush to remove dust and hair.
- Insert the inlet net into the main unit with the mark on the net aligned with on the main unit, and turn the net clockwise until is aligned with the same mark on the unit.

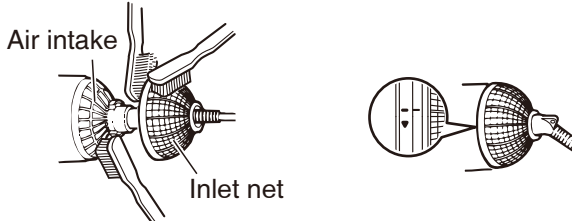

Troubleshooting

Issue	Possible cause	Solution
The main unit or hot air is abnormally hot. The inside of the main unit becomes red or generates smoke.	The safety device is not operating normally.	Immediately stop using the styler.
Air comes out but stops from time to time.		
The base of the power cord or plug is deformed or damaged.	The power cord is about to break.	

Issue	Possible cause	Solution
The styler blows weak air.	The voltage switch setting does not match the operating voltage.	Match the voltage switch with the operating voltage.
The styler or the air is extremely hot. A spark appeared, and the styler stopped working.	Air intake is blocked. Dust or hair is attached to the air intake.	If the inlet is plugged, the temperature rise in the appliance will cause the safety mechanism to engage, resulting in the disconnection of the power supply. In such a case, make sure to turn the switch to “0” and unplug the styler. Then, remove anything plugging the inlet and any adhered dust or hair. Leave the main unit until it cools before using it. If this does not eliminate the problem, stop using the styler.
No air blows out. (The styler is not operating)	The safety device was activated.	Immediately stop using the styler.
	The power cord is about to break.	
Something sounds as though it's moving around within the main unit. Or, something else seems wrong.		
Power plug is abnormally hot.	The plug is connected to the AC outlet in a loose manner.	The AC outlet may have a problem. Consult an electronics appliance store.

The negative ions tend to be ineffective for those who have: wavy hair; curly hair; fine soft hair; short hair; curly hair thermally modified to be straight; naturally moist hair.

Nobby by TESCOM

 
使用說明書

負離子捲髮吹風機

NB1C32

家庭用

- 使用前請務必詳閱本說明書，正確使用本產品。以使用說明書內未記載之方式，或未以正確方法使用時，製造商將不負任何責任。特別是「安全注意事項」請務必詳閱。
- 使用說明書請務必存放於使用者隨時可翻閱之處。




使用方法

請務必確認現場插座的電壓與形狀後使用。

- 1 將吹風罩安裝至本體上。
(※安裝時請務必確認沒有異物進入。)


吹風罩的凹槽對準本體的卡榫插入，直到聽到「咔」的聲音為止。

 - 拆除方式
按住卸除按鈕，一面將吹風罩拔出。

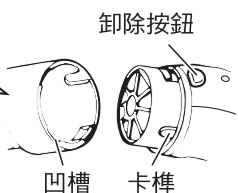

- 2 電壓切換開關請選擇「100V 120V」或「200V 240V」。

 
利用銅板等物品確實轉動開關到底。

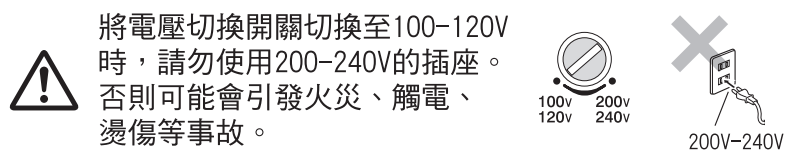

- 3 電源插頭插入插座。

- 4 將開關切換至「1」或「2」，一面吹整，同時以整髮梳將頭髮梳開。

 - 5 使用後，請將切換鈕推至「0」，並自插座拔除電源插頭。



安全注意事項

- 請務必使用交流100-120V或200-240V的電壓。
- 使用整髮器前，務必確認電源線、電源插頭與本體並無損傷。
- 使用後務必關閉電源，並自插座拔除電源插頭。
- 存放時，請勿將電源線纏繞於主機上。
- 使用時，請勿遮檔入風口或出風口。
- 使用時，請勿對準出風口查看。
- 入風口或出風口請勿置入髮夾或其他異物。
- 請勿於開啟電源的狀態下，將機體放置於寢具、紙類、可燃物附近。此外，嚴禁於瓦斯等易燃物附近使用。
- 產品不可浸泡於水或液體之中，不可沾濕。手部潮濕時請勿使用。
- 請勿使用及保管在浴缸附近、濕度高的場所或近水處。
- 於浴室使用吹風機時，即使未開啟電源，仍因近水處而可能造成危險，因此使用完畢後，請務必將插頭自插座上拔除。
- 為達多重保護之目的，建議於浴室供電電路上安裝額定感度電流30mA以下的漏電斷路器。(詳情請洽電器行專業人員)
- 如產品未正常運轉，請立即關閉開關並拔除電源插頭。
- 除取得執照的修理技術士外，不可自行拆解或修理本產品。為避免危險，電源線破損時，請交由經銷商，或具有該類證照之人更換。
- 在使用本產品時，除非於可負責安全之人監督下使用，或經事前指導，否則不可將本產品提供給知覺、精神能力耗弱者(包含孩童)或不具備使用經驗或知識之人使用。因本產品設計並非供上述之人使用的產品。
- 請注意勿讓孩童持本產品嬉戲。
- 請勿於孩童周遭使用。請勿存放於孩童伸手可及之處。
- 請勿用於乾燥毛髮與整理頭髮以外的用途。不得做為洗髮等的用具。

- 手上沾有染髮劑時，請勿觸摸本產品。請勿直接將整髮劑塗在吹風罩上。
- 注意勿讓產品掉落或碰撞。勿拉扯電源線。
- 使用時，請小心避免毛髮捲進入入風口。
- 請勿一次將大量頭髮捲繞在吹風罩上，亦不可將頭髮重疊捲繞。
- 請待充分冷卻之後，再行拆裝吹風罩。使用中或剛使用後的吹風罩與出風口溫度很高，請勿觸摸。
- 請勤加清潔入風口(每月一次以上)。請勿使用酒精、揮發油或去光水保養本產品。
- 請勿做為營業之用。亦需避免放置於不特定多數人可使用的場所。

警告：本產品切勿在浴缸、淋浴間、洗臉台或其他盛水容器附近使用。



本記號代表本產品不可在近水(浴池、淋浴間等)處使用。

規 格		
產 品 名 稱	負離子捲髮吹風機	
產 品 編 號	NB1C32	
電 源	100V-120V~/200V-240V~ 切換式 50-60Hz	
消 耗 電 量	450W (100/200V) 650W (120/240V)	
安 全 裝 置	防過熱裝置(溫控器、溫度保險絲)	
尺 寸	長209 × 寬46 × 高52mm (僅本體)	
重 量	245 g (僅本體)	電 源 線 長 度 1.7m

 
清潔方法

請切斷電源、拔除電源插頭，待冷卻後再行清潔。


配件

- 1 將造型整髮梳由本體上拆下。
- 2 利用梳子等清除灰塵與頭髮等異物。覺得髒污時，請拆下整髮梳，用水沖洗後徹底晾乾，然後再裝回本體上。

- 拆除整髮梳的方法
將整髮梳往下壓即可拆除。
(1)→(2)

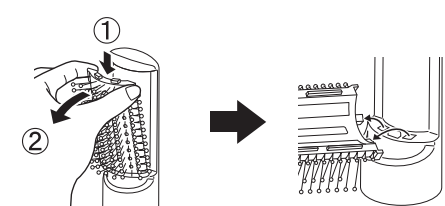

 - 安裝整髮梳的方法
將整髮梳的卡榫 ① 插入整髮梳底座的凹槽 ② 位置，一面往下壓，同時將卡榫 ③ 安裝於凹槽 ④ 上。
(1)→(2)

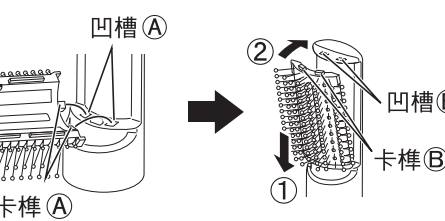


本體

使用乾燥的軟布擦拭污垢。污垢難以擦除時，可將軟布浸泡於「肥皂水」或「以水稀釋的中性清潔劑」中，確實擦乾後再擦拭。



入風口 (進風網)

 
- 1 將進風網往左轉，直到 ① 記號處對準本體的 ▼ 記號位置，即可由本體上拆下。
- 2 利用柔軟的梳子等，清除灰塵與頭髮等異物。(進風網的內外側與入風口)
- 3 將進風網的 ① 記號對準本體的 ▼ 記號嵌入，再往右轉，直到對準本體的 ② 記號為止即可裝設完成。

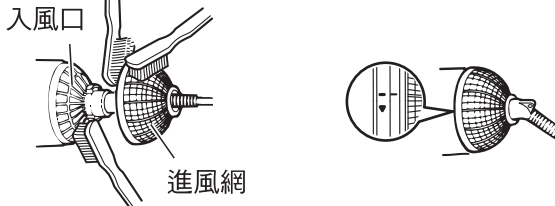

疑似故障時


異常現象	可能的原因	處理方法
主機或熱風異常高溫。主機內部呈現紅色並冒出煙霧。	安全裝置未正常運作。	請立即停止使用。
出風不順，時有時無。		
電源線或插頭，根部變形或毀損。電源線扭轉後，無法復原。	電源線即將斷裂。	

 產品部位名稱與作用

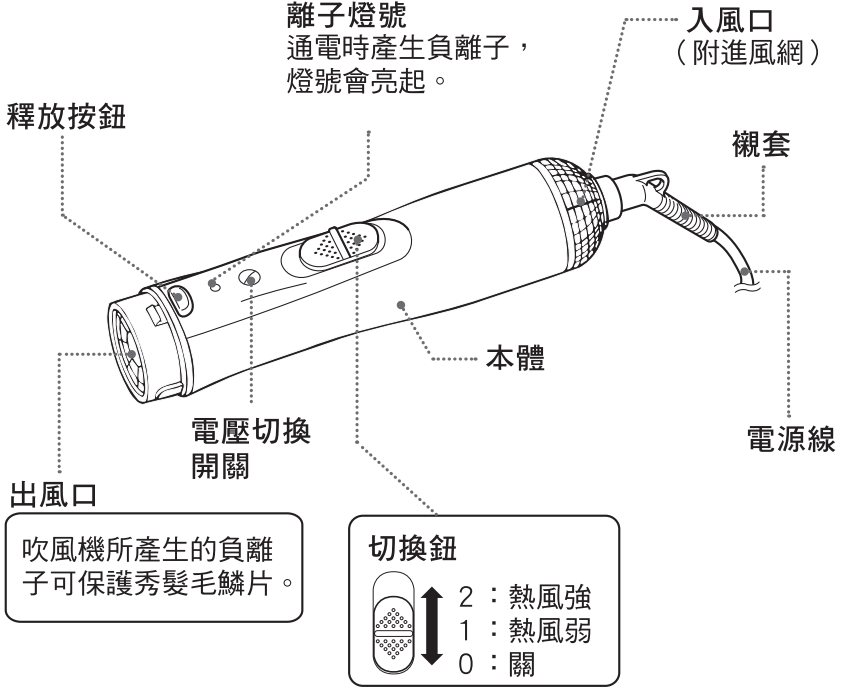


附屬配件

 - 吹風罩：造型整髮梳
※ 整髮梳含有茶花精油香氣微細膠囊。

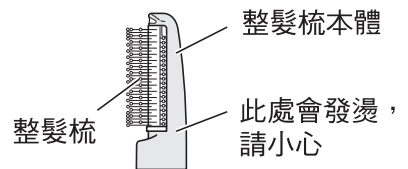

- 旅行用收納袋

 

異常現象	可能的原因	處理方法
風量異常地弱。	電壓切換鈕與使用電壓不合	電壓切換鈕請調整到適用電壓。
本體或溫風異常地熱。從出風口冒出火花，就不能動了。	入風口阻塞。入風口附著了灰塵或頭髮。	入風口阻塞時，會由於產品內部的溫度上升而啟動安全裝置切斷通電。此時，請務必將切換鈕切到「0」、拔下電插頭，清理阻塞或附著在入風口處的灰塵或毛髮等。待主機冷卻下來後即可再使用。
吹不出風來。(不能動。)	安全裝置啟動中。	若仍無法排除問題，請立即停止使用
	電源線斷裂。	
本體內部有異物移動發出聲響。有其他異常情形。		
電源插頭異常發熱。	插入插座部位鬆動。	原因可能在於插座。請洽詢鄰近電器行。

使用者如有下列情況，使用效果可能較不明顯。
・捲髮 ・自然捲嚴重 ・髮質細軟 ・短髮
・頭髮剛燙直不久 ・原本髮質即屬於潤澤型