


User Manual

Hair Dryer

NNIB19

- Before use, please read this manual and be sure to use the dryer properly.
In particular, be sure to thoroughly read and closely follow the Safety Warnings, as they are precautions for preventing personal injury and property damage.
- Store the manual in a location where it can be easily accessed at any time.

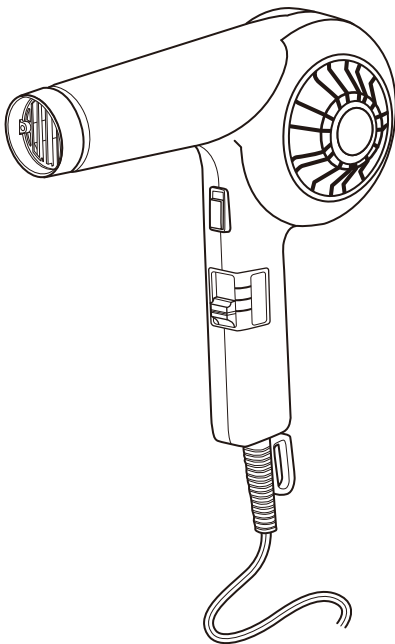

Safety Warnings


- Make sure to turn the switch OFF and unplug the dryer after use.
- Pull on the power plug instead of the power cord when unplugging the dryer.
- Before use, check that the appliance is compatible with the voltage used in the region where you are located.
- Do not use the dryer if the inside of the main unit turns red, if it generates smoke, or if you hear the sound of foreign matter moving inside it.
- Regarding the power cord, do not damage, forcibly bend, twist, pull, load any heavy weight onto, bring near to any hot object, pinch, modify, or bundle it when using the dryer. Do not wrap the cord around the main unit.
- Long-term use or misuse may cause the power cord to break. Do not use it if:
 - The dryer sometimes does not blow air;
 - The power cord remains twisted;
 - The base of the power cord or plug is deformed or damaged; or
 - The power plug is loose in the AC outlet.
- If the power cord is damaged, it must be replaced by the manufacturer, its service agent, or similarly qualified persons in order to avoid a hazard.
- Do not leave the dryer with the power switch turned ON. Do not put the dryer on anything flammable or sensitive to heat, such as a mattress, paper, or plastic bags.
- Do not use it on babies. Do not have a child close by when using it. This dryer should be stored out of reach of children.
- This appliance is not intended for use by persons (including children) with reduced physical, sensory or mental capabilities, or lack of experience and knowledge, unless they have been given supervision or instruction concerning use of the appliance by a person responsible for their safety.
- Children should be supervised to ensure that they do not play with the appliance.
- Do not use the dryer near any flammable material, such as gasoline, benzene, thinner, gas, or hair cosmetics agents. Do not use the dryer with hairspray.
- Keep the air intake and outlet clear during use.
- Do not insert any foreign matter, such as a hair pin, into the air intake or outlet.
- Do not look into the air outlet during use.
- Keep the air intake at least 10 cm away from hair to prevent hair from being sucked into the dryer during use. Do not use if the air intake is damaged.
- Do not remove the filter, and do not use the dryer if the filter is damaged.

- Do not use this appliance near bathtubs, showers, basins or other vessels containing water.
When the dryer is used in a bathroom, unplug it after use since the proximity of water presents a hazard even when the dryer is switched off.
For additional protection, the installation of a residual current device (RCD) having a rated residual operating current not exceeding 30 mA is advisable in the electrical circuit supplying the bathroom. Ask your installer for advice.
- Do not use the dryer with wet hands.
- Do not place the dryer in water or pour water on it. Store it in a place with low moisture.
- Do not modify the dryer. No one other than repair engineers should disassemble or repair the dryer.
- Clean the air intake at least once per month.
- Keep the air outlet at least 3cm away from hair. Do not blow hot air onto one location for too long.
- Do not touch any attachment or the air outlet during or immediately after use, and also avoid any accidental contact with your skin, as the attachments and the outlet will be hot.
- The dryer is intended for the hair-drying and styling of human hair. Do not use it for other purposes, such as for pet hair, wigs, or hairpieces.
- Do not let the dryer fall or sustain impact. Do not use it if has been damaged.
- Do not touch the dryer with hair dye-stained hands. Never apply alcohol, benzene, or enamel remover.



This symbol indicates that this appliance must not be used near water, such as baths or basins with shower water.

Part names and functions

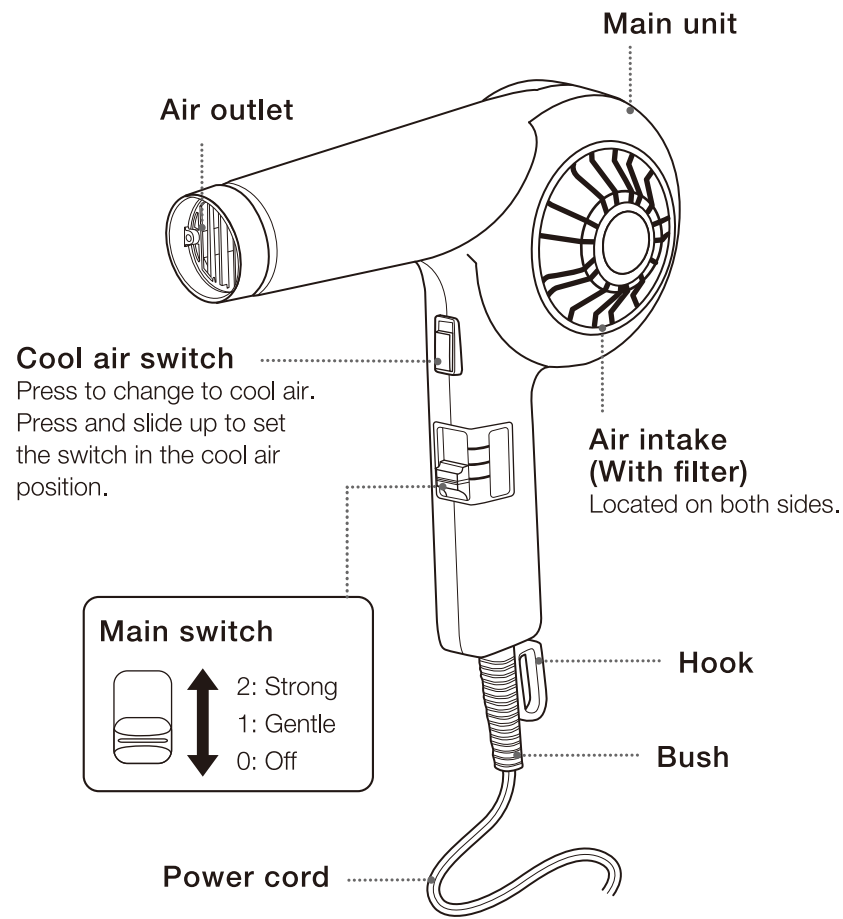

Hood
Attach to use.

*Hot during and immediately after use, do not touch.

Cord band
Convenient for wrapping up the cord for storage.

How to use

- 1 Insert the power plug into the AC outlet.
- 2 Turn the main switch to “2” or “1” and aim the air flow toward the hair.

Maintenance

Unplug the appliance and allow it to cool before performing maintenance.

Main unit

Wipe away any dirt with a dry soft cloth.
For dirt that is difficult to remove, immerse a cloth in soapy water or neutral detergent diluted with water, wring it dry, and wipe away the dirt.

Filter

Remove the filter from the main unit, and lightly tap the dust off, or lightly brush it with a soft brush.
For dirt that is difficult to remove, lightly press and wash with cold or lukewarm water, and let dry completely.

● Attaching and removing the filter

Removing
Turn in the direction of the arrow in the diagram to remove.

Attaching
① Line up the groove on the filter with the protrusion on the main unit, and attach the filter.
② Turn in the direction of the arrow until the filter reaches a stopped position.

Troubleshooting

Issue	Possible cause	Solution
Hot or cool air comes out unintentionally. A spark appears from the air outlet. (A spark is caused by the safety device.)	The air intake is blocked. Dust and hair have become attached to the air intake.	Ensure that the air intake is not blocked. Remove dust and hair. If the problem persists, stop use immediately and consult with the purchasing location.
Other abnormalities or defects are present.	Stop use immediately and consult with the purchasing location.	

Specifications	
Product number	NNIB19
Power Source	220V~ 50-60Hz
Power consumption	1300W
Power cord length	3m

In order to download this user manual, please visit the TESCO website below.
▶ <http://www.tescom-japan.co.jp/global/>