 


NTCD41

For household use only

- Before use, please read this manual and be sure to use the dryer properly. The manufacturer assumes no responsibility for the dryer when it is used in ways other than the proper method described in this manual. In particular, be sure to read the Safety Warnings.
- Store the manual in a location where it can be easily accessed at any time.

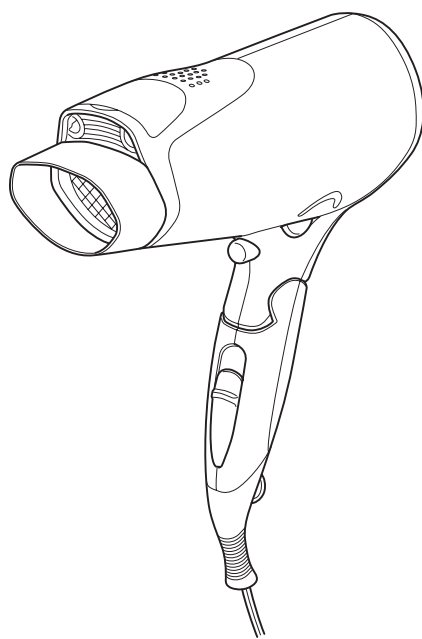

Safety Warnings

- Make sure to turn the switch OFF and unplug the dryer after use.
- Pull on the power plug instead of the power cord when unplugging the dryer.
- Make sure to supply the dryer with voltage of AC220-240V.
- Plug the dryer into an AC outlet with a rated current of 8A or higher without any power strip or any other devices.
- Do not use the dryer if the inside of the main unit turns red, if it generates smoke, or if you hear the sound of foreign matter moving inside it.
- Regarding the power cord, do not damage, forcibly bend, twist, pull, load any heavy weight onto, bring near to any hot object, pinch, modify, or bundle it when using the dryer. Do not wrap the cord around the main unit.
- Long-term use or misuse may cause the power cord to break. Do not use it if:
 - The dryer sometimes does not blow air;
 - The power cord remains twisted;
 - The base of the power cord or plug is deformed or damaged;
 - The power plug is loose in the AC outlet.
 If the supply cord is damaged, it must be replaced by the manufacturer, its service agent, or similarly qualified persons in order to avoid a hazard.
- Do not leave the dryer with the power switch turned ON. Do not put the dryer on anything flammable or sensitive to heat, such as a mattress, paper, or plastic bags.
- Do not use it on babies. Do not have a child close by when using it. This dryer should be stored out of reach of children.
- This appliance is not intended for use by persons (including children) with reduced physical, sensory or mental capabilities, or lack of experience and knowledge, unless they have been given supervision or instruction concerning use of the appliance by a person responsible for their safety. Children should be supervised to ensure that they do not play with the appliance.
- Do not use the dryer near any flammable material, such as gasoline, benzene, thinner, gas, or hair cosmetics agents. Do not use the dryer with hairspray.
- Keep the air intake and outlet clear during use.
- Do not insert any foreign matter, such as a hair pin, into the air intake or outlet.
- Do not look into the air outlet during use.
- Keep the air intake at least 10 cm away from hair to prevent hair from being sucked into the dryer during use. Do not use if the air intake is damaged.



 
This symbol indicates that this appliance must not be used near water, such as baths or basins with shower water.

Do not use this appliance near bathtubs, showers, basins or other vessels containing water. When the dryer is used in a bathroom, unplug it after use since the proximity of water presents a hazard even when the dryer is switched off.


For additional protection, the installation of a residual current device (RCD) having a rated residual operating current not exceeding 30 mA is advisable in the electrical circuit supplying the bathroom.

- Do not use the dryer with wet hands.
- Do not place the dryer in water or pour water on it.
- Store it in a place with low moisture.
- Do not modify the dryer. No one other than repair engineers should disassemble or repair the dryer.
- Clean the air intake at least once per month.
- Keep the air outlet at least 3cm away from hair. Do not blow hot air onto one location for too long.
- Do not touch any attachment or the air outlet during or immediately after use, and also avoid any accidental contact with your skin, as the attachments and the outlet will be hot.
- The dryer is intended for the hair-drying and styling of human hair. Do not use it for other purposes, such as for pet hair, wigs, or hairpieces.
- Do not let the dryer fall or sustain impact. Do not use it if has been damaged.
- Do not touch the dryer with hair dye-stained hands. Never apply alcohol, benzene, or enamel remover.
- The dryer is not intended for business use. Keep it away from unspecified usage by a large number of people.

When opening or collapsing the grip, do not put your finger on the shaded parts, and do not perform the opening or collapsing action too quickly.

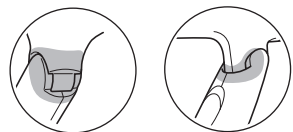

Part names and functions

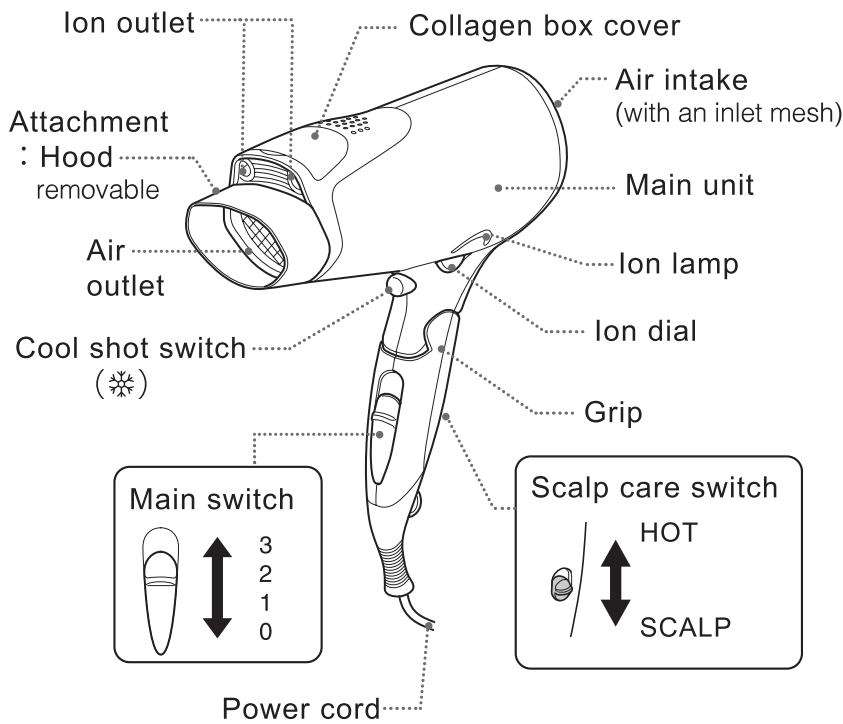 


Collagen box

Contains collagen ingredients Attached to the main unit. The collagen box is effective for about 2 years. (When used 30 minutes per day) We recommend changing the box about every 2 years. Ask for replacement parts at the point of purchase.

How to change the collagen box

 Open the collagen box cover and replace the collagen box.

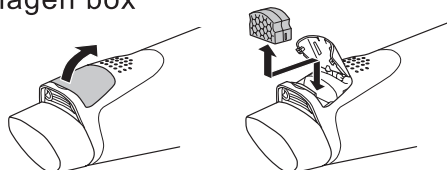

How to use

- Insert the power plug into an AC outlet.**
- Select air temperature with the scalp care switch.**
 - HOT...hot air to dry hair swiftly
 - SCALP...moderate air temperature to dry hair while caring for hair
- Set the main switch to 3, 2 or 1 and blow hair with the dryer.**

3 and 2 is suitable for blow drying hair after washing, while 1 provides a gentle airflow suitable for setting hair.

How to use the Cool shot switch (snowflake symbol): After arranging hair with hot air, switch to cold air and apply it to the hair for 10 to 15 seconds to maintain a hair setting for a long period of time.

Ion dial
Adjust the amount of negative ions emitted from the ion outlet. The color of the ion lamp varies according to the position of the ion dial.

LOW (Small amount) → HIGH (Large amount)
- Turn the main switch to [0] and remove the power plug from the outlet.**

Troubleshooting

Issue	Possible cause	Solution
Hot or cool air comes out unintentionally. A spark appears from the air outlet. (A spark is caused by the safety device.)	Dust and hair have become attached to the air intake. The air intake is blocked.	Maintain the air intake. Remove any objects that block the air intake. If this does not eliminate the problem, stop using the dryer.
The main unit or hot air is abnormally hot. The inside of the main unit becomes red or generates smoke.	The safety device is not operating normally.	Immediately stop using the dryer.
No air blows out.	The power cord has been broken.	
Air comes out but stops from time to time.	The power cord is about to break.	
The base of the power cord or plug is deformed or damaged.		
The power cord remains twisted.		
Something sounds as though it's moving around within the main unit.		
Power plug is abnormally hot.	The plug is connected to the AC outlet in a loose manner.	The AC outlet may have a problem. Consult an electronics appliance store.

The following people may have trouble seeing results from nanoions and collagen.
 • People with wavy hair, people with curly hair, people with fine soft hair, people with short hair, people who have just straightened their hair, people with naturally moist hair.

Maintenance

Set the main switch to [0] and unplug the unit from the AC outlet before performing maintenance.

Main unit

Wipe away any dirt with a dry soft cloth. To clean off difficult dirt, immerse a cloth in soapy water or neutral detergent diluted with water, wring it dry, and wipe away the dirt.

 
Air intake

Remove the inlet mesh. Dust it.

IF dust is not removed, use a vacuum cleaner or wash it with water.


After washing it with water, dry it to a sufficient degree.

After deataching the inlet mesh, remove hair, dust, etc. on the inlet with a soft brush or the like.

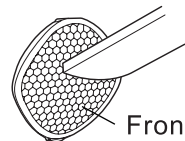

*Do not use a vacuum cleaner on the back side of the inlet mesh.

 How to detach the inlet mesh How to attach the inlet mesh

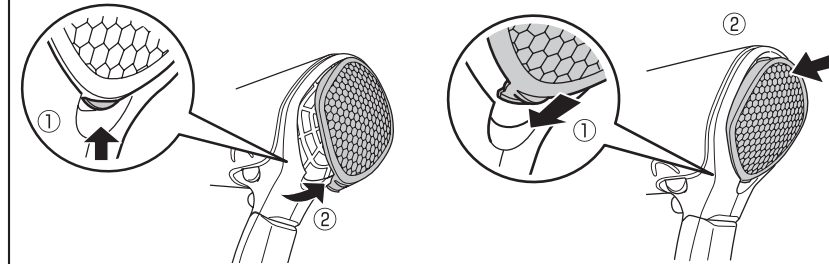


使用說明書

美髮膠原蛋白吹風機

NTCD41

家庭用

 - 使用前請務必詳閱本說明書，正確使用本產品。以使用說明書內未記載之方式，或未以正確方法使用時，製造商將不負任何責任。特別是「安全注意事項」請務必詳閱。
- 使用說明書請務必存放於使用者隨時可翻閱之處。

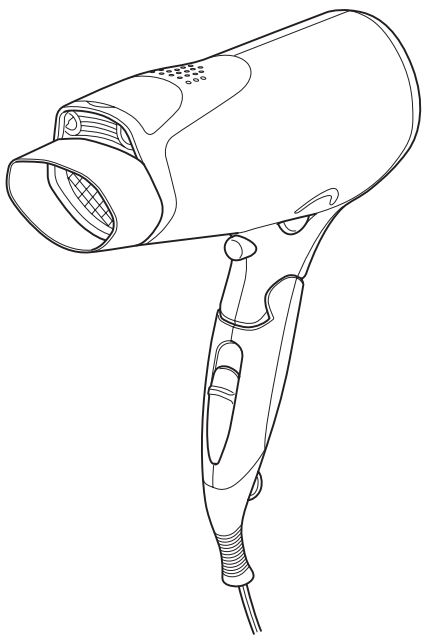

安全注意事項

- 使用後請務必將開關推至「0」，並自插座拔除電源插頭。
- 自插座拔除電源插頭時，請手持插座部位。
- 請務必使用 220-240V 交流電。
- 請獨立直接連接額定電流 10A 以上的插座。
- 本體內部呈現紅色、冒出煙霧，或本體內部有異物晃動發出聲響時，請勿使用。
- 請勿毀損電源線。
- 使用時請勿過度彎折、扭轉、拉扯、重壓、靠近熱源、夾壓、改造或捆綁。
- 長時間使用或不當使用，可能會導致電源線斷裂，因此下列狀況發生時請勿使用。
 - 使用時出風不順，時有時無。
 - 電源線扭轉後無法復原。
 - 電源線、插頭根部變形或損傷。
 - 插座插入部位鬆動。
 為避免危險，電源線破損時，請交由經銷商，或具有該類證照之人更換。
- 開關開啟後請勿閒置。
- 請勿放置於耐熱度低的物品上，例如棉被、紙類等易燃物或塑膠袋等。
- 請勿放任孩童單獨使用。不可用於嬰幼兒。
- 請勿於幼兒周遭使用。請勿存放於幼兒伸手可及之處。
- 在使用本產品時，除非於可負責安全之人監督下使用，或經事前指導，否則不可將本產品提供給知覺、精神能力耗弱者（包含孩童）或不具備使用經驗或知識之人使用。因本產品設計並非供上述之人使用的產品。
- 請注意勿讓孩童持本產品嬉戲。
- 請勿於易燃物（汽油、揮發油、稀釋劑、瓦斯、髮膠等）附近使用。
- 請勿與噴霧式髮膠同時使用。
- 請勿遮擋入風口或出風口。
- 入風口或出風口請勿置入髮夾或其他異物。
- 使用中請勿對準出風口查看。
- 使用時，請和頭髮保持距離 10cm 以上，避免毛髮捲進入風口。
- 入風口破損狀態下請勿使用。

 


本記號代表本產品不可在近水（浴池、淋浴間等）處使用。


不要靠近浴室、臉盆或其它裝有水的容器使用本產品。於浴室使用吹風機時，即使未開啟電源，仍因近水處而可能造成危險，因此使用完畢後，請務必將插頭自插座上拔除。

- 為達多重保護之目的，建議於浴室供電電路上安裝額定感度電流 30mA 以下的漏電斷路器。
- 手部潮溼時請勿使用。
- 請勿將產品浸水或向產品潑水。請保管於乾燥場所。
- 請勿改裝。除維修技師外，請勿自行拆解或維修。
- 請勤加清潔入風口（每月一次以上）。
- 出風口與頭髮保持 3cm 以上距離。溫風請勿在同一位置停留過久。
- 使用中或剛使用後的配件與出風口溫度很高，請勿觸摸。
- 除了吹乾頭髮、整理造型之外，請勿挪為他用，亦不可用於寵物和假髮。
- 請勿摔落或撞擊產品，如已破損，請勿使用。
- 手上沾有染髮劑時，請勿觸摸本產品。請勿使用酒精、揮發油或去光水保養本產品。
- 請勿作為業務用途。此外亦請勿放置於不特定多數人可取用的場所。

折疊或展開手把時，手指請勿置於
■ 標色部位。
請勿快速折疊或展開手把。

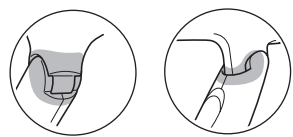

產品部位名稱與作用

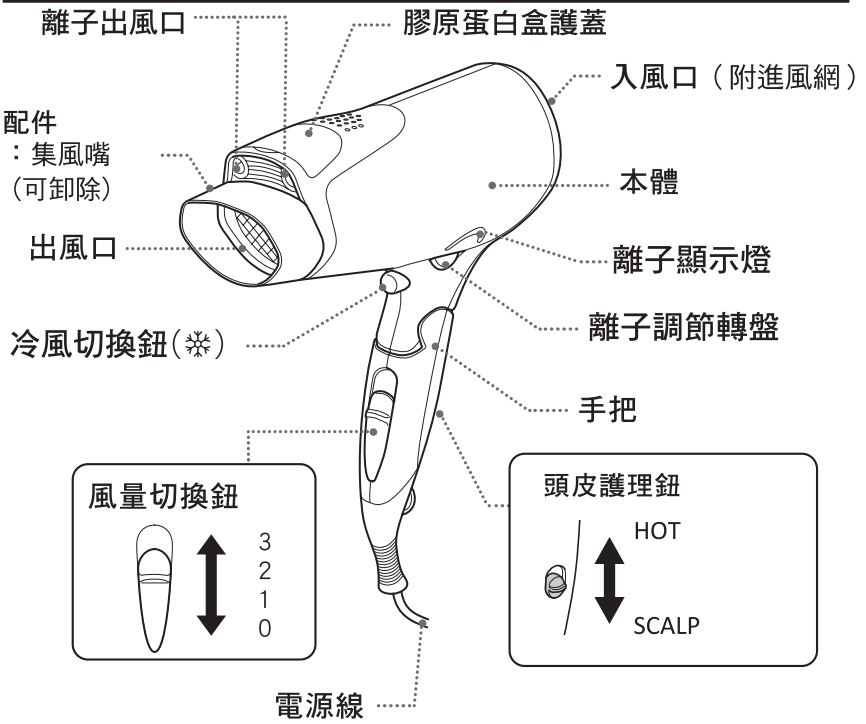 

- 膠原蛋白盒

膠原蛋白盒請預先安裝於本機。
膠原蛋白盒的效果約可維持兩年。（每天使用三十分鐘）
建議每兩年更換一次膠原蛋白盒。
關於更換零件，請洽原購買店家。

膠原蛋白盒的更換方法
按照圖示打開膠原蛋白盒護蓋，並進行更換。

使用方法

- 1 電源插頭插入插座。
- 2 將頭皮護理鈕推至「HOT」或「SCALP」選擇溫度。
 - SCALP...降低溫度，在吹乾毛髮與頭皮之際同步進行護理。
 - HOT...高溫熱風能快速吹乾頭髮。
- 3 選擇主按鍵的「1」、「2」或「3」吹整秀髮。
 - 「2」與「3」適合洗髮後吹乾；「1」為便於造型的柔風，適合造型秀髮。

● 冷風切換鈕的使用方法 (※)
以溫風吹整後，切換成冷風吹髮 10~15 秒，可使造型更加持久。

離子調整轉盤
調節離子出風口吹出來的離子量。
離子燈的燈色，會隨著離子調節轉盤的位置而變化。
- 4 使用後，請將風量切換鈕推至「0」，並自插座上拔除電源插頭。

疑似故障時

異常現象	可能的原因	處理方法
時而溫風，時而冷風。 出風口冒出火花。 （火花是因為安全裝置啟動所致）	入風口附著了灰塵 或頭髮。 入風口阻塞。	請清潔入風口。 剔除灰塵或毛髮後， 若仍無法排除問題， 請立即停止使用， 並洽詢「客服聯絡窗口」。
主機或熱風異常高溫。 主機內部呈現紅色並 冒出煙霧。	安全裝置未正常 動作。	請立即停止使用。
吹不出風來。	電源線斷裂。	
出風不順， 時有時無。	電源線即將斷裂。	
電源線或插頭根部 變形或毀損。		
電源線扭轉後 無法復原。		
本體內部有異物，移動時發出聲響。		
電源插頭異常發熱。	插入插座部位鬆動。	原因可能在於插座。 請洽詢臨近電器行。

使用者如有下列情況，負離子和膠原蛋白的使用效果將較不明顯。
 ● 捲髮 ● 自然卷嚴重 ● 髮質細軟
 ● 短髮 ● 頭髮剛燙直不久 ● 原本髮質即屬潤澤型

清潔方法

 
請將風量切換鈕推至「0」並拔除電源插頭，待冷卻之後再開始清潔。

本體

使用乾燥的軟布擦拭污垢。
污垢難以擦除時，可將軟布浸泡於「肥皂水」或「以水稀釋的中性清潔劑」中，確實擰乾後再擦拭。


入風口

進氣網、本體入風口
拆卸進氣網。
輕輕敲落灰塵等污垢。
污垢難以敲落時，可使用吸塵器吸取，或將進氣網浸入清水、溫水中輕壓洗淨。

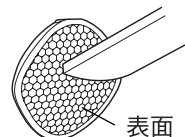

拆下進氣網後，請用柔軟的清潔刷刷除機體入風口上的毛髮或灰塵。

 ※請勿使用吸塵器從進氣網背面進行吸塵。

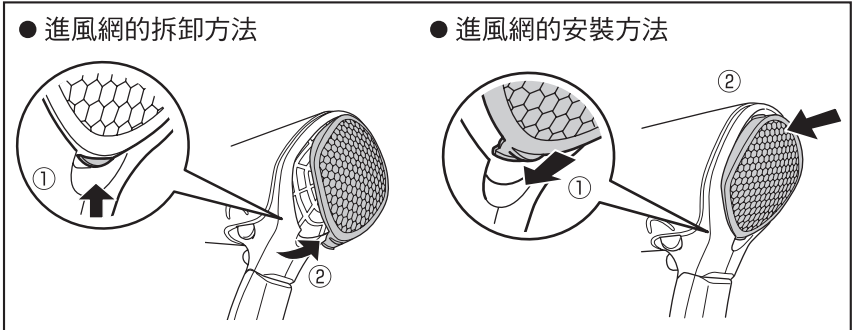

規 格	
產 品 編 號	NTCD41
電 源	220-240V～ 50-60Hz
消 耗 電 量	1350-1600W
電 源 線 長 度	1.7m