 


Negative Ion Hair Styler


NTIC6J

For household use only


- Before use, please read this manual and be sure to use the appliance properly. In particular, be sure to thoroughly read and closely follow the Safety Warnings, as they are precautions for preventing personal injury and property damage.
- Store the manual in a location where it can be easily accessed at any time.

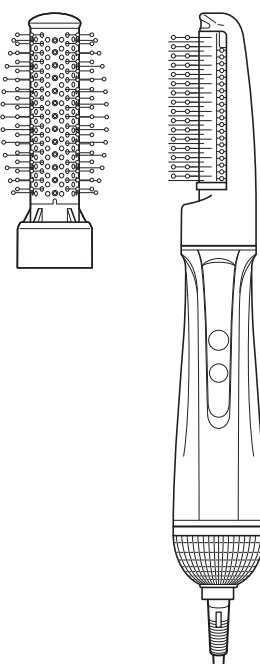

 Part names and functions

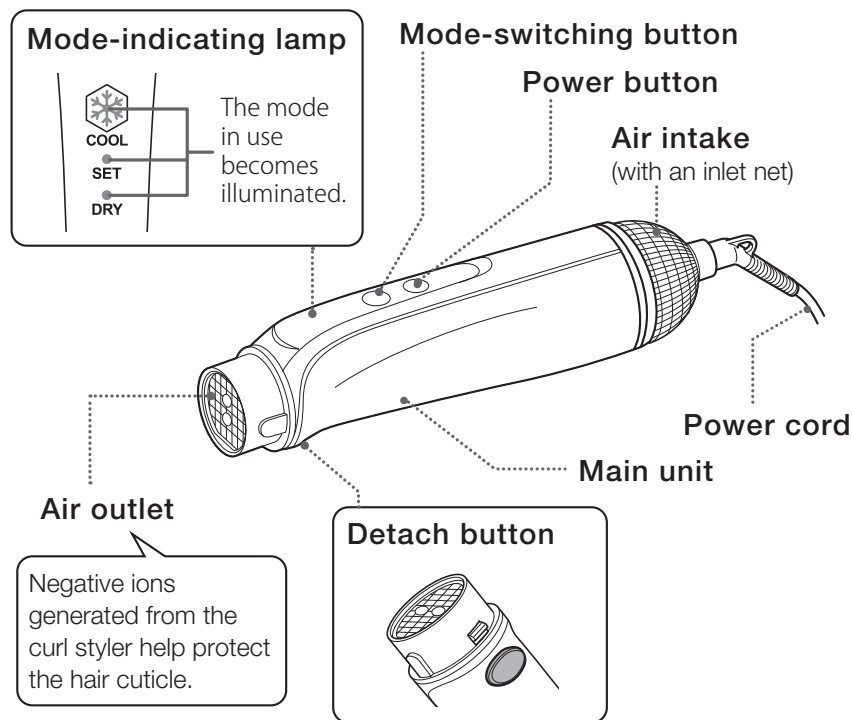

■Attachment

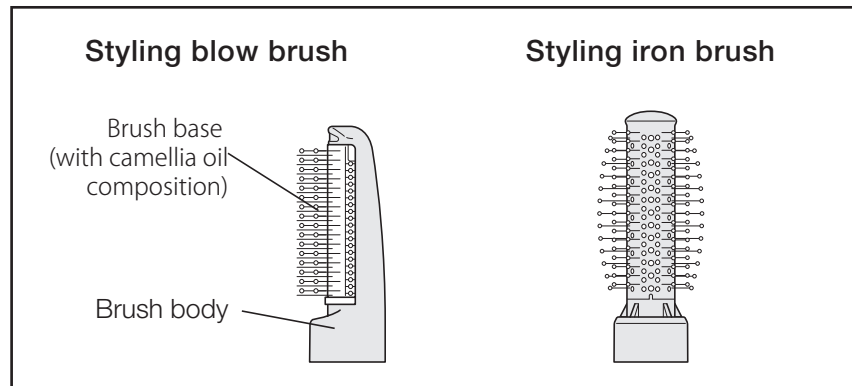 

Safety Warnings

- After use, turn off and unplug the unit.
 - Pull on the power plug instead of the power cord when unplugging the styler.
 - Before use, check that the appliance is compatible with the voltage used in the region where you are located.
 - Do not use the styler if the inside of the main unit turns red, if it generates smoke, or if you hear the sound of foreign matter moving inside it.
 - Regarding the power cord, do not damage, forcibly bend, twist, pull, load any heavy weight onto, bring near to any hot object, pinch, modify, or bundle it when using the styler. Do not wrap the cord around the main unit.
 - Long-term use or misuse may cause the power cord to become damaged. Do not use it if:
 - The styler sometimes does not blow air;
 - The power cord remains twisted;
 - The base of the power cord or plug is deformed or damaged; or
 - The power plug is loose in the AC outlet.
 - If the supply cord is damaged, it must be replaced by the manufacturer, its service agent, or similarly qualified persons in order to avoid a hazard.
 - Do not leave the styler with the power switch turned ON. Do not put the styler on anything flammable or sensitive to heat, such as a mattress, paper, or plastic bags.
 - Do not use it on babies. Do not have a child close by when using it. This styler should be stored out of reach of children.
 - This appliance is not intended for use by persons (including children) with reduced physical, sensory or mental capabilities, or lack of experience and knowledge, unless they have been given supervision or instruction concerning use of the appliance by a person responsible for their safety.
 - Children should be supervised to ensure that they do not play with the appliance.
 - Do not use the styler near any flammable material, such as gasoline, benzine, thinner, gas, or hair cosmetics agents. Do not use the styler with hairspray.
 - Do not block the air intake or outlet.
 - Do not put hairpins or any other foreign objects into the air intake or outlet.
 - Examine the attachment before use, and make sure that there are no foreign objects inside.
 - Do not look into the air outlet while it is in use.
 - Keep the air inlet at least 10 cm away from hair to prevent hair from being sucked into the styler during use.
- Warning:** This symbol indicates that this product must not be used near water, such as baths or basins with shower water.
- Do not use this appliance near bathtubs, showers, basins or other vessels containing water. When the appliance is used in a bathroom, unplug it after use since the proximity of water presents a hazard even when the appliance is switched off. For additional protection, the installation of a residual current device (RCD) having a rated residual operating current not exceeding 30 mA is advisable in the electrical circuit supplying the bathroom. Ask your installer for advice.
 - Do not use the styler with wet hands.
 - Do not place the styler in water or pour water on it. Store it in a place with low moisture.
 - Do not modify the styler. No one other than repair engineers should disassemble or repair the styler.
 - Clean the air inlet and inlet net at least once a month.
 - Do not allow too much hair to wrap around the attachment.
 - Do not touch any attachment or the air outlet during or immediately after use, and also avoid any accidental contact with your skin, as the attachments and the outlet will be hot.
 - The styler is intended for the hair-drying and styling of human hair. Do not use it for other purposes, such as for pet hair.
 - Do not let the styler fall or sustain impact. Do not use it if it has been damaged.
 - Do not touch the styler with hair dye- stained hands. Never apply alcohol, benzine, or enamel remover.
 - Do not apply hairstyling products onto the attachment directly.
 - The styler is not intended for business use. Keep it away from unspecified usage by a large number of people.

How to use

- 1 Add the attachment to the main unit.
 - Align the concave part of the attachment with the convex part of the main unit and push firmly.
 - To detach, pull the attachment away while maintaining pressure on the detach button.
- 2 After checking that this appliance is compatible with the voltage and shape of the outlet, insert the power plug into the outlet.
- 3 Press the power button. The appliance will start operating in mode “DRY” so switch to the mode yo u want to use by pressing the mode-switching button.

- The mode is changed in the following order with each press of the mode-switching button.
 - “DRY” ... For fast drying.
 - “SET” ... For drying while styling.
 - “COOL” ... For blowing cool air. After styling hair using hot air, apply cool air to the hair for 10-15 seconds before removing it from the brush to set the style for longer retention.
- 4 Turn the power off by pressing the power button, and unplug the appliance.

* For safety reasons, this appliance automatically powers off approximately 30 minutes after the last usage, but a standby current is generated as long as the appliance is plugged in. Be sure to unplug the appliance after usage.

Maintenance

 
Unplug the appliance and allow it to cool before performing maintenance.

Main unit

Wipe away any dirt with a dry soft cloth. To clean off difficult dirt, immerse a cloth in soapy water or neutral detergent diluted with water, wring it dry, and wipe away the dirt.

Air intake

- 1 To remove the net from the main unit, turn the inlet net in the direction of the arrow in the illustration until the mark on the net is aligned with the mark on the main unit.
- 2 Use a soft brush or the like to remove dust and hair from the air intake and inlet net.
- 3 Insert the inlet net into the main unit by aligning the mark on the net with the mark on the main unit, and then turn the net in the direction of the arrow in the illustration until the mark on the net is aligned with the mark on the main unit.

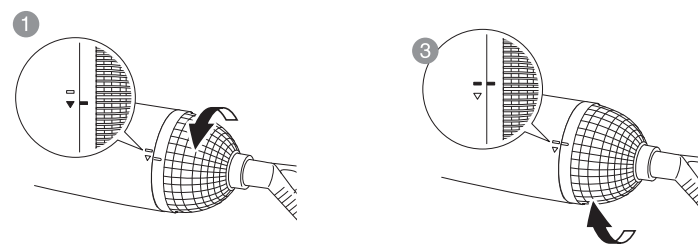

Troubleshooting

Issue	Possible cause	Solution
No air blows out.	The appliance is not compatible with the voltage.	Use with 100-120V or 200-240V.
Hot or cool air comes out unintentionally. A spark appears from the air outlet. (A spark is caused by the safety device.)	The air intake is blocked. Dust and hair have become attached to the air intake.	Ensure that the air intake is not blocked. Remove dust and hair. If the problem still persists, stop using the styler immediately.
I cannot feel the effect of the negative ions.	The effect of the negative ions is less apparent in people with the following hair types. <ul style="list-style-type: none">• Curly hair• Wavy hair• Thin, fine hair• Short hair• Recently straightened hair• Naturally oily hair	
Other abnormalities or defects are present.	Immediately stop using the styler.	

Specifications

Product number	NTIC6J
Power Source	100-120V~ / 200-240V~ 50-60Hz Automatically Switching Type
Power consumption	500W(100/200V) / 700W(120/240V)
Power cord length	1.7m

Attachment

Remove the attachment from the main unit, and use a soft brush or the like to remove dust and hair, etc. When dirt build-up is a concern, wash the attachment in water and allow to dry completely.

The brush base of the styling blow brush may be cleaned after detaching it from the brush body.

● How to detach

Remove the brush base from the brush body while pushing the brush base down.

● How to attach

Insert the bottom of the brush base into the brush body, and insert the top while pushing the brush base down.

使用說明書


負離子捲髮吹風機

NTIC6J


家庭用

- 使用前，請務必詳閱本使用說明書，正確使用本產品。尤其「安全注意事項」是預先防範人身危害或財產損害的內容，請詳閱並務必遵守。

 
- 使用說明書請務必存放於使用者隨時可翻閱之處。

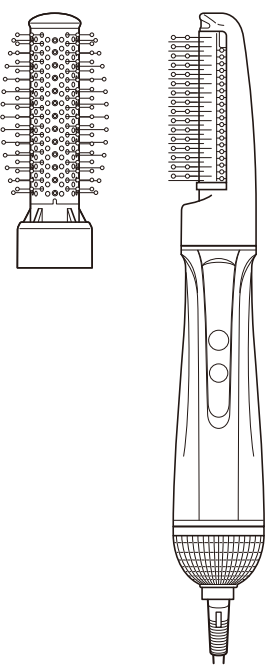

產品部位名稱與作用

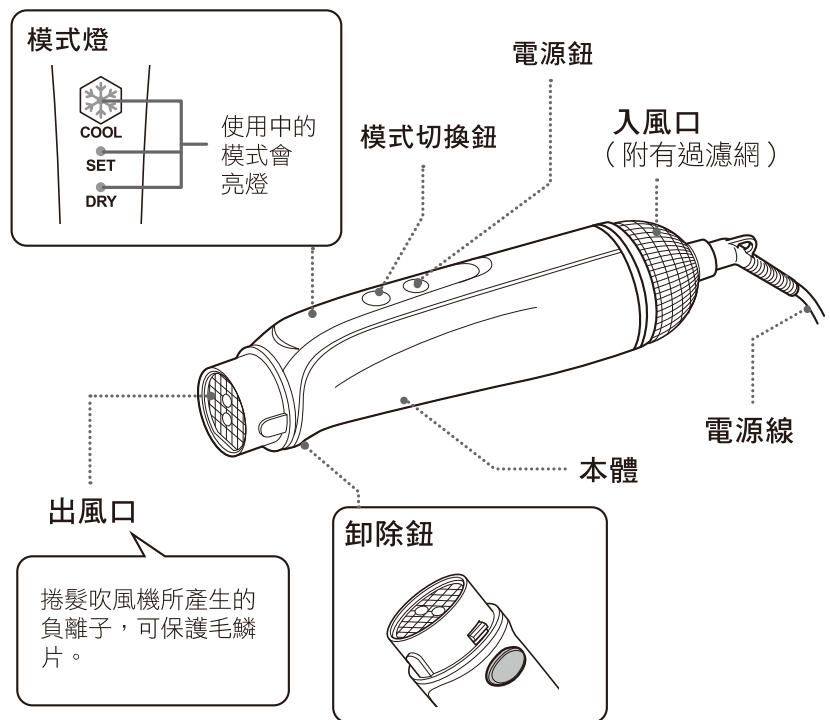 

■配件

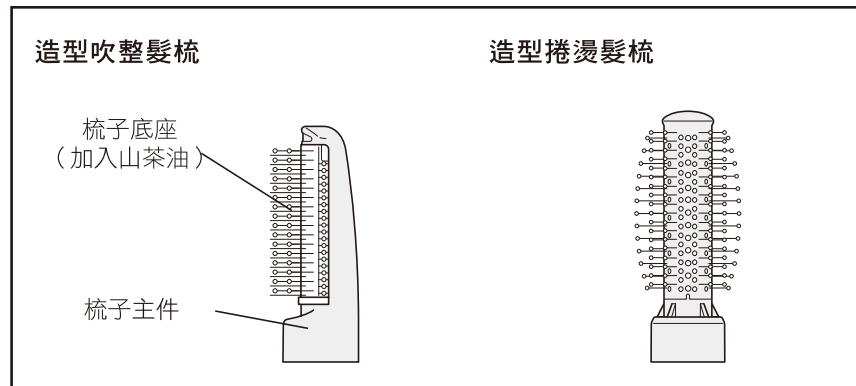 

安全注意事項

- 使用後務必關閉開關，自插座上拔下電源線。
- 自插座拔除電源插頭時，請手持插座部位。
- 使用前，請確認產品是否適用使用地區的電壓。
- 本體內部呈現紅色、冒出煙霧，或主機內部有異物晃動發出聲響時，請勿使用。
- 請勿毀損電源線。
 - 使用時請勿過度彎折、扭轉、拉扯、重壓、靠近熱源、夾壓、改造或捆綁。電源線請勿纏繞於本體上。
- 長時間使用或不當使用，可能會導致電源線斷裂，因此下列狀況發生時請勿使用。
 - 使用時出風不順，時有時無。
 - 電源線扭轉後無法復原。
 - 電源線、插頭根部變形或損傷。
 - 插座插入部位鬆動。
- 為避免危險，電源線破損時，請交由經銷商，或具有該類證照之人更換。
- 開關開啟後請勿閒置。請勿放置於耐熱度低的物品上，例如棉被、紙類等易燃物或塑膠袋等。
- 不可用於嬰幼兒。
 - 請勿於幼兒周遭使用。請勿存放於幼兒伸手可及之處。
- 在使用本產品時，除非於可負責安全之人監督下使用，或經事前指導，否則不可將本產品提供給知覺、精神能力耗弱者（包含孩童）或不具備使用經驗或知識之人使用。因本產品設計並非供上述之人使用的產品。
- 請注意勿讓孩童持本產品嬉戲。
- 請勿於易燃物（汽油、揮發油、稀釋劑、瓦斯、髮膠等）附近使用。
 - 請勿與噴霧式髮膠同時使用。
 - 請勿遮擋入風口或出風口。
- 入風口或出風口請勿置入髮夾或其他異物。
- 安裝配件前，先確認內部有無異物。
- 使用中請勿對準出風口查看。
- 使用時，請和頭髮保持距離10cm以上，避免毛髮捲進入風口。



本記號代表本產品不可在近水（浴池、淋浴間等）處使用。

不要靠近浴室、臉盆或其它裝有水的容器使用本產品。於浴室使用吹風機時，即使未開啟電源，仍因近水處而可能造成危險，因此使用完畢後，請務必將插頭自插座上拔除。為達多重保護之目的，建議於浴室供電電路上安裝額定感度電流30mA以下的漏電斷路器。

- 手部潮溼時請勿使用。
- 請勿將產品浸水或向產品潑水。請保管於乾燥場所。
- 請勿改裝。除維修技師外，請勿自行拆解或維修。
- 請勤加清潔入風口與過濾網（每月一次以上）。
- 請勿使用整髮梳一次捲起大量的頭髮，或是重疊捲起。

 
- 使用中、剛使用後，配件及出風口仍呈高溫，請勿觸摸，此外也請勿碰觸到肌膚。
- 除了吹乾頭髮、整理造型之外，請勿挪為他用，亦不可用於寵物身上。
- 請勿摔落或撞擊產品，如已破損，請勿使用。
- 手上沾有染髮劑時，請勿觸摸本產品。請勿使用酒精、揮發油或去光水保養本產品。
- 請勿直接將整髮劑塗在配件上。
- 請勿作為業務用途。此外亦請勿放置於不特定多數人可取用的場所。

清潔方法

拔下電源插頭，待產品冷卻後再清潔保養。

本體

使用乾燥的軟布擦拭汙垢。汙垢難以擦除時，可將軟布浸泡於「肥皂水」或「以水稀釋的中性清潔劑」中，確實擦乾後再擦拭。


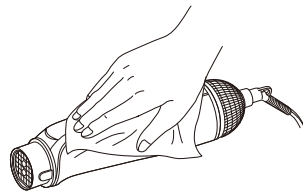


入風口

- 依圖的方向旋轉內網，使◀標記對準▶標記，自本體上卸除。

- 灰塵與頭髮等，請利用柔軟的梳子等工具清除。

  - 安裝時，使◀標記對準▶標記，將內網嵌合本體，依圖的方向轉至▶標記互相對準。

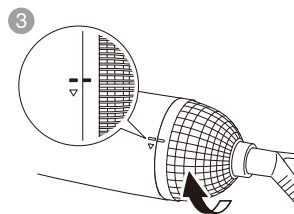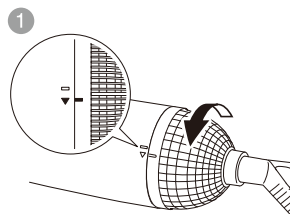

疑似故障時

異常現象	可能的原因	處理方法
吹不出風。	電壓不適用於產品。	使用100-120或200-240V。
時而溫風，時而冷風。出風口冒出火花。（火花是因為安全裝置啟動所致）	入風口附著了灰塵或頭髮。 入風口阻塞。	使用時避免阻塞住入風口。清除灰塵、頭髮。仍無法改善時，請立即停止使用。
負離子效果不顯著。	使用者如有下列請況，其使用效果將較不明顯。 • 捲髮 • 自然卷嚴重 • 髮質細軟 • 短髮 • 頭髮剛燙直不久 • 原本髮質即屬潤澤型	
有其他異常或故障。	請立即停止使用。	

規 格


產 品 編 號	NTIC6J
電 源	100-120V～ / 200-240V～ 50-60Hz 自動切換式
消 耗 電 量	500W(100/200V) / 700W(120/240V)
電 源 線 長 度	1.7m

配件

自本體卸除，以毛刷等請除灰塵與毛髮等。髒汙嚴重時，水洗後充分晾乾。

造型吹整髮梳的梳子底座可自梳子主體拆下清潔保養。

 - 卸除方法
按壓梳子底座下方，自梳子主體卸除。

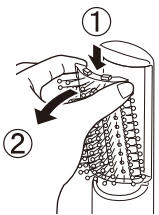

- 安裝方法
將梳子底座下部嵌合梳子主體，一邊按壓一邊嵌合到上部。

