

取扱説明書


# Ion Hair Dryer


## 負離子吹風機

マイナスイオン ヘアードライヤー

**NTID38**

For household use・家庭用

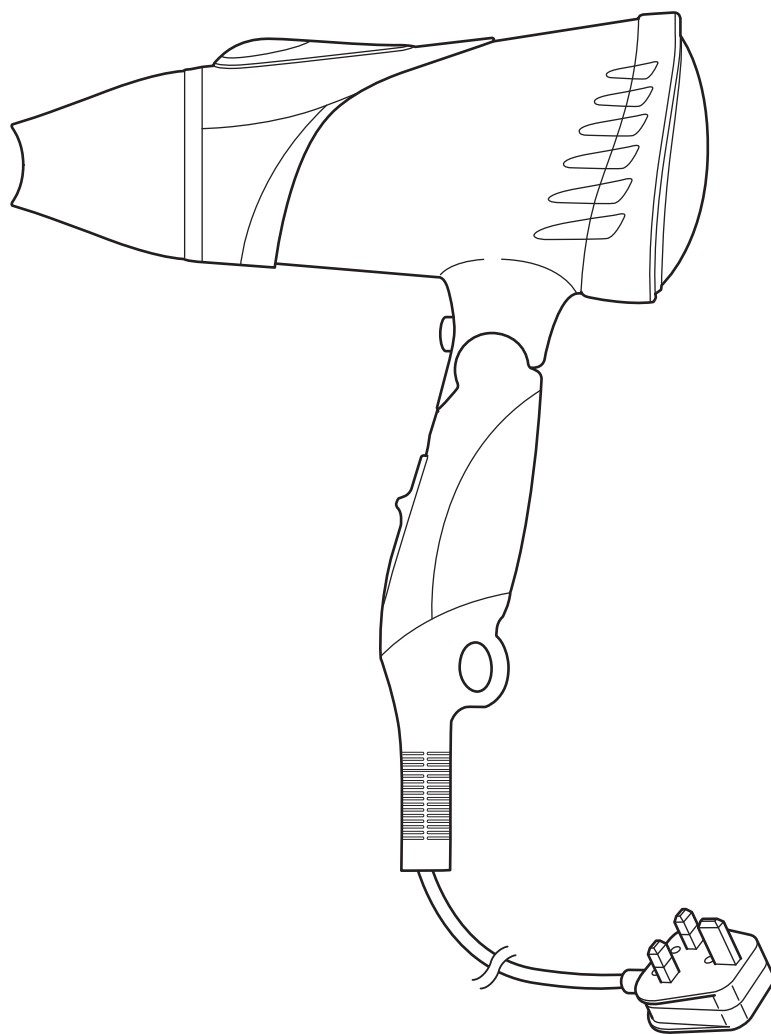

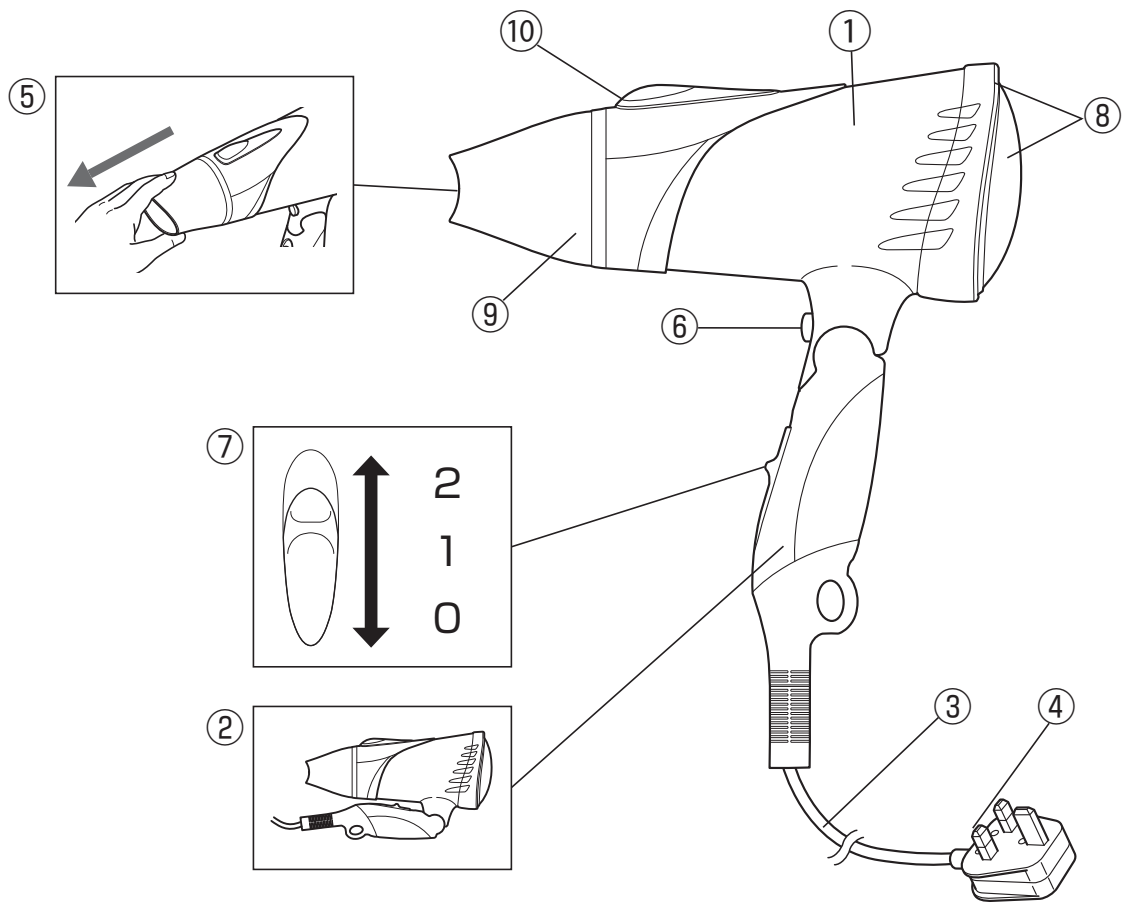


- |                                   |                        |
|-----------------------------------|------------------------|
| ① Main unit                       | ⑥ STYLE Mode switch    |
| ② Grip: Foldable                  | ⑦ Speed Control Switch |
| ③ Power cord                      | ⑧ Intake               |
| ④ Power plug                      | ⑨ Air outlet           |
| ⑤ Styling Concentrator: Removable | ⑩ Ion lamp             |

- |           |        |
|-----------|--------|
| ① 機身      | ⑥ 冷風開關 |
| ② 握柄：可折疊  | ⑦ 切換開關 |
| ③ 電源線     | ⑧ 進風口  |
| ④ 電源插頭    | ⑨ 吹風口  |
| ⑤ 定型罩：可取下 | ⑩ 負離子燈 |

- |                       |               |
|-----------------------|---------------|
| ① 本体                  | ⑥ クールショットスイッチ |
| ② グリップ：折りたためます        | ⑦ 切替スイッチ      |
| ③ 電源コード               | ⑧ 吸込口         |
| ④ 電源プラグ               | ⑨ 吹出口         |
| ⑤ スタylingフード：取り外しできます | ⑩ イオンランプ      |

**⚠ Caution・注意・注意**

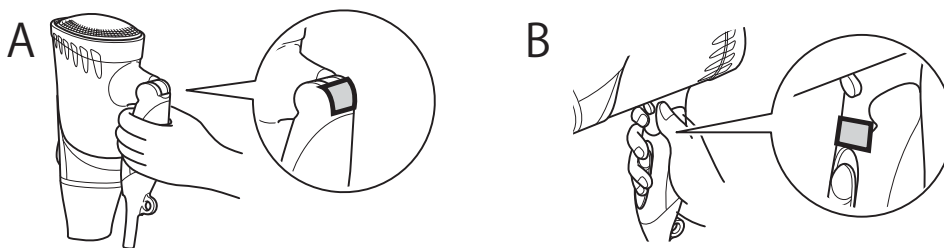

When closing or opening the grip, do not place your finger on the ■.  
(A: When opening the grip B: When closing the grip)

● There is a risk of your finger being caught and causing injury.

在折疊或打開握柄時，請不要把手指放于 ■ 部。  
(A：打開握柄時 B：折疊握柄時)

● 手指等有被夾到、受傷的危險。

グリップを折りたたんだり開くときに、■部に指を置かない。  
(A：グリップを開くとき B：グリップを折りたたむとき)

● 指などをはさみ、けがの恐れがあります。

Specifications	Product Name	Ion Hair Dryer	Power Cord Length	2.0 m
	Product Number	NTID38	Weight	580g (Styling Concentrator attached)
	Power Source	AC 220-240 V	Attachments	Styling Concentrator
	Power Consumption	1680-2000 W	Safety Features	Overheating prevention device (Thermostat and temperature fuse)
	Warm Air Temperature	140°C *When selecting 2-“Warm Air” (When ambient temperature is 30°C)		
	Dimensions	Height 273 mm X Width 221 mm X Depth 91 mm (with Styling Concentrator attached)		
	規格	品名	負離子吹風機	電源綫長度
型號		NTID38	重量	580g (帶定型罩)
電源		AC 220-240V	標配品	定型罩
消耗功率		1680-2000W	安全裝置	過熱保護裝置 (恆溫器·溫度保險絲)
溫風溫度		140°C ※2-溫風模式時 (周圍溫度30°C的情況下)		
尺寸		高273 X 寬 221 X 長91mm (帶定型罩)		
仕様	品名	マイナスイオンヘアドライヤー	電源コード長さ	2.0m
	形名	NTID38	質量	580g (スタイリングフード付き)
	電源	AC 220-240V	付属品	スタイリングフード
	消費電力	1680-2000W	安全装置	温度過昇防止装置 (サーモスタット・ 温度ヒューズ)
	温風温度	140°C ※2-温風時 (周囲温度30°Cの場合)		
	寸法	高さ 273 × 幅 221 × 奥行 91 mm (スタイリングフード付き)		

- Before using, read this manual and be sure to use the product properly. The manufacturer assumes no responsibility for the product when it is used in ways other than the proper method described in the manual. In particular, be sure to read the Safety Warnings (pages 4-6).
- Keep the manual in a location where the user can access it at any time.

- 在使用本產品之前，請務必仔細閱讀本使用說明書，以便能正確使用。未根據使用說明書，而以不正確的使用方法使用本產品的情況下，製造商將概不負任何責任。尤其請務必閱讀「安全上的注意事項」(9~11)。
- 本使用說明書，請用戶務必妥善保管于隨時便于查閱的地方。

- ご使用になる前に、この取扱説明書を必ずお読みいただき、正しくご使用ください。取扱い説明書にはない、正しくない使用方法で使用された場合、製造元では一切の責任を取りかねます。特に「安全上のご注意」(14～16P)は必ずお読みください。
- 取扱説明書は、お使いになる方がいつでも見られるところに必ず保管してください。

## Table of Contents

目録  
もくじ

---

Safety Warnings .....	4~6
How to Use .....	7
Troubleshooting .....	8

---




安全上の注意事項 .....	9-11
使用方法 .....	12
疑似故障的情况 .....	13

---


安全上のご注意 .....	14~16
使いかた .....	17
故障かな? と思ったら .....	18


# Safety Warnings

- Make sure to read these safety warnings before using, and use the product correctly.
- These are meant to prevent injury and property damage. Be sure to follow them.
- The warnings are separated into the following categories.

 <b>Danger</b>	For actions that have a significant chance to cause serious injury or death if done improperly.
 <b>Alert</b>	For actions that could cause serious injury or death if done improperly.
 <b>Caution</b>	For actions that could cause injury or property damage if done improperly.

## Examples of Symbols

 This symbol indicates an action that must not be performed.

 This symbol indicates an action that must be performed.

## Alert

**Always set the switch to 0 and unplug the cord from the socket after use.**

- There is a risk of fire or electric shock.



**When removing the power cord from the socket, hold the plug to remove it.**

- There is a risk of damaging the plug, electric shock, short circuit or fire.

**Always use AC 220-240 V.**

- There is a risk of fire, burns or electric shock.



**Do not use when the main unit is bright red, emitting smoke, or it sounds like a foreign object is moving around inside.**

- There is a risk of fire, electric shock or injury.

**Do not damage the power cord. Do not unnecessarily bend, twist, pull, squeeze in, modify, leave bundled, place heavy objects on it or place it near heat.**

- There is a risk of fire or electric shock.

 **Alert**

**Long periods of use or improper use may damage the power cord. Stop use immediately in the following cases.**

- Airflow becomes inconsistent during use.
  - The power cord is bent and will not return to being straight.
  - The power cord or plug is deformed or damaged.
  - The plug is no longer tight in the socket.
- If the supply cord is damaged, it must be replaced by the manufacture, its service agent, or similarly qualified persons in order to avoid a hazard.

**Do not wrap the power cord around the main unit.**

- There is a risk of damaging the power cord, fire, electric shock or burns.

**Do not leave with the switch on.**

**Do not place on top of beds, paper, plastic or other objects likely to burn or be damaged by heat.**

- There is a risk of deformation and warping from fire and heat.



**Do not let children use by themselves, do not let toddlers use. Do not use the hair dryer within reach of toddlers. Do not store within reach of toddlers.**

- There is a risk of fire, electric shock or burns.

**Do not place the plastic bag used for wrapping within reach of toddlers.**

- If placed over the head, there is a risk of suffocation from blocking the nose and mouth.

**Do not use near flammable materials (gasoline, benzene, thinner, gas, hair setting spray, etc.)**

- There is a risk of fire or explosion.

**Do not block the intake or air outlet.**

- There is a risk of fire or burns.

**Do not put hairpins or other objects inside the intake or air outlet.**

- There is a risk of fire or electric shock.

**Do not look in the air outlet during use.**

- There is a risk of dust or other objects being expelled with the airflow and causing injury.

**Do not use at the same time as hair setting spray.**

- There is a risk of fire or burns.



This symbol means do not use this appliance near water.

**Do not use this appliance near bathtubs, showers, basins or other vessels containing water.**

- When the hairdryer is used bathroom, unplug it after use since the proximity of water presents a hazard even when the hairdryer is switched off.
- For additional protection, the installation of a residual current device (RCD) having a rated residual operating current not exceeding 30mA is advisable in the electrical circuit supplying the bathroom. Ask your installer for advice.



**Do not use with wet hands.**

- There is a risk of short circuit or electric shock.



## Alert



**Do not immerse in water.  
Do not pour water  
on the hair dryer.**

- There is a risk of short circuit or electric shock.



**Only qualified personnel  
should repair or disassemble  
the hair dryer.**

## Caution

**During use, make sure hair is not sucked into the intake.**

- There is a risk of hair being cut, burns or the hair dryer malfunctioning.

**When attaching or removing the attachment, be sure the hair dryer is completely cooled first.**

- There is a risk of burns.



**Use caution when wearing necklaces or other metal accessories.**

- There is a risk of burns from warm air heating the accessory.

**This appliance is not intended for use by persons (including children) with reduced physical, sensory or mental capabilities, or lack of experience and knowledge, unless they have been given supervision or instruction concerning use of the appliance by a person responsible for their safety. Children should be supervised to ensure that they do not play with the appliance.**

---

**Do not use for purposes other than drying or styling hair, or on pets.**

- There is a risk of burns, fire or malfunction.

**Do not use on wigs or extensions.**

- There is a risk of deformation or warping from the heat.

**Do not drop or hit the hair dryer.**

- There is a risk of electric shock, fire or injury.



**Do not use commercially.**

**Do not place in a location where a large number of people can use.**

- Continued use can lead to malfunctions.

**Do not move the switch unnecessarily quickly.**

**Do not use when the switch is not entirely in one position.**

- There is a risk of malfunction.

**During and right after use, the Styling Concentrator and air outlet will be hot, so do not touch them. Do not allow them to contact skin.**

- There is a risk of burns.

# How to Use

- 1** Confirm the Speed Control switch is at 0 and plug the power cord into the socket.
- 2** Set the switch to 1 or 2.
  - 1 ... Appropriate for setting hair.
  - 2 ... Appropriate for drying after washing hair.
  - When the STYLE Mode switch is pressed, the hair dryer will switch between warm and cold air. After setting your hair style with warm air, switching to STYLE and blowing cold air on your hair for 10 to 15 seconds will help set the hair longer.
- 3** After using, set the switch to 0 and unplug the power cord from the socket. After cooling completely, store in a location with minimal moisture.

## Caution

- Use 10 cm or further from hair. There is a risk of damaging hair.
- Do not blow warm air on a single location for longer than 20 to 30 seconds. There is a risk of burns.
- Do not touch when hands have hair coloring on them. There is a risk of removing paint.
- Do not block the intake of air during use, such as by placing a towel over the hair dryer. There is a risk of fire, burns or malfunctions.
- Ensure that hair is not sucked into the intake during use. There is a risk of hair being cut, burns or malfunctions.
- When folding the grip closed or open, be sure not to get your fingers caught. (Page 2)

# Maintenance

Set the switch to 0, unplug the power cord and cool completely before maintenance.

## Main Unit

Wipe clean with a soft, dry cloth. For stubborn dirt, soak a soft cloth in soapy water or a neutral cleaning agent diluted in water, wring it dry and then wipe clean.

## Caution

Do not clean the main unit in water.  
Do not use alcohol, benzene or thinner.

## Intake

Use a soft brush to clean out dust and hair.

\*Clean the intake at least once a month, or there is a risk of the warm air becoming too hot, hair burning or burn injuries.





# Troubleshooting


Issues	Possible Reasons	Solutions
<p>The airflow is inconsistent, randomly stopping.</p> <p>Sparks can be seen from the air outlet. (Sparks are caused by the safety device functioning.)</p>	<p>Dust or hair is caught in the intake. The intake is covered.</p>	<p>Remove the dust and hair. Do not cover the intake. If this does not fix the issue, use the contact information on the product box or contact Tescom Denki (back cover).</p>
<p>The main unit and warm air are extremely hot. The interior of the main unit becomes bright red, or smoke is emitted.</p>	<p>The safety device is not functioning properly.</p>	<p>Stop use immediately, use the contact information on the product box or contact Tescom Denki (back cover).</p>
<p>No air blows out.</p>	<p>The power cord is damaged and has no connection.</p>	
<p>The airflow is inconsistent, randomly stopping.</p>	<p>The power cord has almost lost its connection.</p>	
<p>The base of the power cord or plug is deformed or damaged.</p>		
<p>The power cord is bent and will not return to its former shape.</p>		
<p>It sounds like there is a foreign object in the main unit.</p>		
<p>The power plug is extremely hot.</p>	<p>Not plugged in firmly to the socket.</p>	<p>The issue may be with the socket. Stop use immediately.</p>
<p>The negative ions don't seem to have any effect.</p>	<p>Effects may not be as noticeable for the following people:</p> <ul style="list-style-type: none"> <li>● People with frizzy hair</li> <li>● People with curly hair</li> <li>● People with thin, soft hair</li> <li>● People with short hair</li> <li>● People who just recently had hair relaxing treatment</li> <li>● People whose hair is moist in the first place</li> </ul>	

# 安全上的注意事項

- 在使用本產品之前，請務必首先仔細閱讀此「安全上的注意事項」，以保證正確使用。
- 為防止造成人身危害以及財產損失，請務必遵守。
- 注意事項分為以下幾項。

 **危險** | 表示在錯誤使用本產品時，有造成死亡或者重傷可能性，并且被認定具有高度危險緊迫性的內容。

 **警告** | 表示在錯誤使用本產品時，被認定有造成死亡或者重傷可能性的內容。

 **注意** | 表示若未按說明操作，預計有對人身造成傷害的可能性或僅發生物品受損的內容。

## 圖示舉例

 記號為，告知使用者「禁止做的事情」的內容。

 記號為，告知使用者「必須做的事情（強制）」的內容。

## 警告

**使用後務必將開關置於「0」，  
將電源線從電源插座拔出。**

- 否則有引發火災、觸電的危險。



**將電源線從電源插座上拔出時，請握住電源插頭拔出。**

- 若電源線受損，有引發觸電、短路、火災的危險。

**請務必使用 220~240V 交流電源。**

- 否則有引發火災、觸電、燙傷的危險。



**在機身內部變紅、冒煙、機身中有異物  
晃動的聲音時請勿使用。**

- 否則有觸電、引發火災、受傷的危險。

**請勿損傷電源線。**

**請勿強行彎折、扭擰、拉扯、請勿放置重物、請勿靠近發熱物體、  
請勿夾入到其他物品中、請勿加工、請勿在紮捆狀態下使用。**

- 否則有引發火災、觸電的危險。

## 警告

在長時間使用或者錯誤使用本產品情況下，電源線有斷裂的危險，因此在下列狀態發生時請立即中止使用。

- 使用中吹風口時斷時續的時候。
- 電源線彎曲無法復原的時候。
- 電源線、電源插頭端部變形、受損的時候。
- 電源插座接觸不良的時候。
- 如果標配線有損毀，必須由生產商，服務代理或者有相關資質人員進行更換以避免危險。

**請勿將電源線卷於機身上。**

- 否則電源線有斷裂、引發火災、觸電、燒毀的危險。

**請在使用後關閉電源開關。**

**請勿放置於床、紙張、塑料等易燃物或不利受熱的物體上。**

- 否則有引發火災或受熱變質、變形的危險。



**請勿讓小孩單獨使用。請勿讓嬰幼兒使用。**

**請勿在幼兒手能夠到的地方使用。請勿放置於幼兒手能夠到的地方。**

- 否則有觸電、受傷、燙傷的危險。

**請勿將包裝的塑料袋放置於嬰幼兒手可能夠到的地方。**

- 如果覆蓋於頭部會堵住口鼻，有導致窒息的危險。

**請勿靠近易燃物（汽油、揮發油、稀釋劑、煤氣、頭髮塑型劑等）。**

- 否則有引發爆炸、火災的危險。

**請勿堵住進風口、吹風口。**

- 否則有引發火災、燙傷的危險。

**請勿從進風口、吹風口放入髮夾、異物等。**

- 否則有引發火災、觸電的危險。

**使用中請勿從吹風口窺望機器內部。**

- 灰塵等異物會隨風一起吹出，有受傷的危險。

**請勿與噴霧式塑型劑一起使用。**

- 否則有著火、灼傷的危險。



此標記表示  
請勿在靠近水的  
地方使用。

**請勿在靠近浴缸、淋浴、洗臉盆或其他有水容器的地方使用。**

- 當在浴室使用吹風機時，請在使用後拔出電源插頭，因為即使斷電後在靠近水的地方仍有可能引起危險。
- 為了增加保護以保障您的安全，建議您再給浴室供電的電氣回路中安裝一個額定漏電工作電流不超過30mA的漏電保護開關，為了確保安全，請向相關資質人員諮詢。



**請勿用濕手使用。**

- 否則有短路、觸電的危險。

## 警告



- 請勿沾水。  
請勿淋水。  
● 否則有短路、觸電的危險。



只有具相關資質人員  
可對本產品進行修理或拆解。

## 注意

使用中，請小心頭髮不要捲入進風口中。  
● 否則會有扯斷頭髮、燙傷、故障的危險。



請在完全冷卻後進行安裝、卸下標配附屬品。  
● 否則有灼傷的危險。

在身上有金屬制的項鍊等物品時，請多加注意。  
● 在用溫風加熱時，有燙傷的危險。

本產品不適用於患有較低體能、感官、  
心理能力或缺少經驗與知識的人群（包括兒童），  
除非此人群在監護人的指導和陪同下使用以保證安全。  
請照管好您的孩子，不要讓他們接觸器具。

請勿使用於吹幹頭髮、整發以外的用途，請勿使用於寵物。  
● 否則有灼傷、引發火災、故障的危險。

請勿使用於假髮或者髮片（接髮）。  
● 加熱後有變質、變形的危險。

請避免摔落或讓吹風機受到撞擊。  
● 否則有觸電、著火、受傷的危險。



請勿用於商業用途。  
另外，請勿放置於不特定多數人使用的地方。  
● 在連續過荷載的情況下有故障的危險。

開關推動時請勿過快。  
另外，請勿在未完全推到檔位的位置使用。  
● 否則有故障的危險。

使用中、剛使用後的定型罩的高溫部以及吹風口，由於溫度尚高請勿觸摸。  
另外也請小心不要接觸皮膚。  
● 否則有燙傷的可能性。

# 使用方法

- 1 確認切換開關處於「0」的地方  
電源插頭插入電源插座。
- 2 切換開關到「1」或者「2」的位置。
  - 「1」…適用於頭髮定型。
  - 「2」…適用於洗髮後吹幹。
  - 按一次冷風開關可以在溫風/冷風之間切換。用溫風給頭髮塑型後用冷風吹頭髮 10~15 秒進行定型，可使髮型長久保持。
- 3 使用過後，切換開關到「0」的位置，將電源插頭從電源插座拔出。  
在完全冷卻後，保存於濕氣較少的地方。

## ⚠ 注意

- 請離開頭髮 10cm 以上使用。否則會有對頭髮造成損傷的危險。
- 同一處連續使用溫風在 20-30 秒以內。否則有燙傷的危險。
- 請勿用沾有染髮劑的手觸摸。否則有損壞塗裝的危險。
- 機身帶有定型罩使用時，請注意不要影響空氣的進風。否則有造成火災、燙傷、故障的危險。
- 使用中請注意頭髮不要捲入進風口中。否則會有頭髮扯斷、燙傷、故障的危險。
- 在握柄折疊和打開的時候，請注意不要夾到手指。(第 2 頁)

# 保管方法

請確定切換開關置於「0」處，拔下電源插頭，冷卻後妥善保管。

## 機身

用乾燥的軟布擦除汙漬。在汙漬難以擦除的時候，用浸過「肥皂水」或者「用水稀釋後的中性洗劑」的軟布充分絞幹後擦拭。

## ⚠ 注意

機身請絕對不要水洗。  
請勿使用酒精、揮發油、稀釋液等。

## 進風口

灰塵還有頭髮等，用軟毛刷清除。

※若溫風過熱，頭髮會有烤焦、燙傷的危險，因此進風口每月需保養 1 次。

# 疑似故障的情況

這種情況下	可能造成的原因	處理方法
<p>出風時斷時續。</p> <p>吹風口看到火花。 (火花是由於安全裝置的運行而出現的。)</p>	<p>進風口附著有灰塵以及頭髮。 清理進風口。</p>	<p>清除灰塵以及頭髮。 保持進風口暢通使用。 這樣仍然無法正常使用時，請諮詢包裝盒上標記的聯繫方式、或者 TESCO M 電機 (有限公司) (封底)。</p>
<p>機身和溫風異常過熱。 機身內部變紅並伴隨冒煙。</p>	<p>安全裝置未正常運行。</p>	<p>立即中止使用，請諮詢包裝盒上標記的聯繫方式、或者 TESCO M 電機 (有限公司) (封底)。</p>
<p>不出風。</p>	<p>電源線斷裂。</p>	
<p>出風時斷時續。</p> <p>電源線、電源插頭的端部變形、受損。</p> <p>電源線扭曲無法復原。</p>	<p>電源線有斷裂趨勢。</p>	
<p>機身中有異物晃動的聲音。</p>		
<p>電源插頭異常過熱。</p>	<p>電源插座接觸不良。</p>	<p>有可能是電源插座的原因。請立即中止使用。</p>
<p>感覺不到負離子效果。</p>	<p>以下人群有可能出現效果不明顯的情況。</p> <ul style="list-style-type: none"> <li>● 自然卷的人</li> <li>● 頭髮不易定型的人</li> <li>● 頭髮細且軟的人</li> <li>● 短髮的人</li> <li>● 剛做完自然卷拉直的人</li> <li>● 原本發質較為濕潤的人</li> </ul>	

# 安全上のご注意


- ご使用前に、この「安全上のご注意」をよくお読みの上、正しくお使いください。
- 人の危害や財産の損害を未然に防ぐためのものです。必ずお守りください。
- 注意事項は次のように区分しています。


**⚠ 危険** | 誤った扱いをすると、死亡または重傷を負う可能性があり、かつその切迫の度合いが高いと想定される内容を示します。

**⚠ 警告** | 誤った扱いをすると、死亡または重傷を負う可能性が想定される内容を示します。

**⚠ 注意** | 誤った扱いをすると、人が傷害を負う可能性や物的損害のみの発生が想定される内容を示します。

## 図記号の例

 記号は、「してはいけないこと」の内容をお知らせするものです。

 記号は、「しなければならないこと（強制）」の内容をお知らせするものです。

## ⚠ 警告

**使用後は必ずスイッチを「0」にし、電源プラグをコンセントから抜く。**

- 火災・感電の恐れがあります。



**コンセントから電源プラグを抜くときは、電源プラグを持って抜く。**

- 電源プラグが傷んで、感電・ショート・発火の恐れがあります。

**必ず交流220-240Vで使う。**

- 火災・感電・やけどの恐れがあります。

**本体内部が真っ赤になったり、煙が出る、本体の中で異物が動く音がするときには使わない。**

- 感電・発火・けがの恐れがあります。



**電源コードを傷つけない。**

**無理に曲げない・ねじらない・引っ張らない・重いものをのせない・熱いものに近付けない・はさみ込まない・加工しない・束ねたまま使用しない。**

- 火災・感電の恐れがあります。

## ⚠ 警告

**長期間の使用や誤使用により、電源コードが断線する恐れがあるため、次の状態が確認されたときはすぐに使用を中止する。**

- 使用中に風が出たり出なかったりするとき。
- 電源コードがねじれて戻らなくなったとき。
- 電源コード・電源プラグの根元部分に変形・傷んでいるとき。
- コンセントの差し込みがゆるいとき。
- 危険を避けるため、電源コードが損傷した場合、製造業者、代理店、またはそれに類する資格を持った人が交換してください。

**本体に電源コードを巻きつけない。**

- 電源コードが断線し、火災・感電・やけどの恐れがあります。

**スイッチを入れたまま放置しない。**

**ベッド・紙・ビニールなど燃えやすいものや熱に弱いものの上に置かない。**

- 火災や熱による変質・変形の恐れがあります。



**子供だけで使わせない。乳幼児に使わない。**

**幼児の手の届く所で使わない。幼児の手の届く場所に保管しない。**

- 感電・けが・やけどの恐れがあります。

**梱包のポリ袋は乳幼児の手の届く場所に置かない。**

- 頭からかぶるなどをすると口や鼻をふさぎ、窒息する恐れがあります。

**引火性のもの（ガソリン・ベンジン・シンナー・ガス・整髪剤など）の近くで使わない。**

- 爆発・火災の恐れがあります。

**吸込口・吹出口をふさがない。**

- 火災・やけどの恐れがあります。

**吸込口・吹出口から、ヘアピン・異物などを入れない。**

- 火災・感電の恐れがあります。

**使用中に吹出口をのぞき込まない。**

- 風と一緒にホコリなどの異物が吹き出し、けがをする恐れがあります。

**スプレー式整髪剤と同時に使わない。**

- 発火・やけどの恐れがあります。



この記号は、本製品を水の近くで使用してはいけない事を示すものです。

**本製品をバスタブ、シャワー、洗面台、その他水の入った容器の近くで使用しない。**

- 浴室でドライヤーを使用する場合は、水の近くではドライヤーのスイッチがオフになっていても危険なため、使用後はコンセントから抜いてください。
- さらなる安全のため、浴室の配電回路に定格漏洩電流が30mA以下の残留電流検知装置（RCD）を取り付けることを推奨します。



**ぬれた手で使わない。**

- ショート・感電の恐れがあります。



## ⚠ 警告



水につけない。  
水をかけない。  
●ショート・感電の恐れがあります。



資格を持った人以外、ドライヤーを修理したり分解したりしないでください。

## ⚠ 注意



使用中、髪の毛が吸込口に吸い込まれないようにする。

●髪の毛が切れたり、やけど・故障の恐れがあります。

アタッチメントの取り付け・取り外しは、完全に冷めてから行う。

●やけどの恐れがあります。

金属製のネックレスなどを身につけている場合、十分注意する。

●温風で熱せられ、やけどする恐れがあります。

本製品は、安全について責任を負える人によって使用法を監視または事前に指導された場合を除き、身体的、感覚的、精神的能力が低下した人（子供を含む）や事前の経験や知識が無い人が使用できるよう設計された製品ではありません。

子供が本製品で遊ばないように注意を払ってください。



毛髪乾燥・整髪以外の用途やペットには使わない。

●やけど・火災・故障の恐れがあります。

かつらやつけ毛（エクステンション）には使わない。

●熱による変質・変形の恐れがあります。

落としたり、ぶついたりしない。

●感電・発火・けがの恐れがあります。

業務用として使わない。

また、不特定多数の人が使う場所に置かない。

●連続過負荷による故障の恐れがあります。

スイッチは必要以上に早く動かさない。

また、不完全な位置で使わない。

●故障の恐れがあります。

使用中・使用直後のスタイリングフードの高温部および吹出口は、高温のためさわらない。また肌に触れさせない。

●やけどの恐れがあります。

# 使いかた

- 1 切替スイッチが「0」になっていることを確認して電源プラグをコンセントに差し込む。
- 2 切替スイッチを「1」または「2」にする。
  - 「1」・・・髪のセットに適しています。
  - 「2」・・・洗髪後の乾燥に適しています。
  - クールショットスイッチを押すたびに温風/冷風が切り替わります。温風でヘアスタイルを整えたあとSTYLEにして冷風を髪に10～15秒あてると、セットが長持ちします。
- 3 使用後は、切替スイッチを「0」にし電源プラグをコンセントから抜く。完全に冷めてから、湿気の少ない所で保管する。

## ⚠ 注意

- 髪から10cm以上離して使う。髪が傷む恐れがあります。
- 1ヶ所に温風をあてるのは20～30秒以内にする。やけどの恐れがあります。
- ヘアカラーリング剤のついた手でさわらない。塗装などがはげる恐れがあります。
- 本体にタオルをかけて使うなど、空気の吸込みを妨げるような使いかたをしない。火災・やけど・故障の恐れがあります。
- 使用中に髪の毛が吸込口に吸込まれないようにする。髪の毛が切れたり、やけど、故障の恐れがあります。
- グリップを折りたたんだり開くときに、指をはさまないように注意する。(2ページ)

# お手入れのしかた

切替スイッチを「0」にして電源プラグを抜き冷めてからお手入れする。

## 本体

乾いたやわらかい布で汚れをふき取る。汚れが落ちにくいときは、「石けん水」または「水で薄めた中性洗剤」に浸したやわらかい布をよく絞ってふき取る。

## ⚠ 注意

本体の水洗いは絶対にしない。  
アルコール・ベンジン・シンナーなどを使わない。

## 吸込口

ホコリや髪の毛などを、やわらかいブラシなどで取り除く。

※温風が熱くなり、髪がこげたり、やけどの恐れがあるので、吸込口は月1回以上お手入れする。

# 故障かな？と思ったら

こんなときは	考えられる原因	処置の方法
<p>風が出たり、出なかったりする。</p> <p>吹出口から火花が見える。 (火花は安全装置の動作によるものです。)</p>	<p>吸込口にホコリや髪が付着している。 吸込口をふさいでいる。</p>	<p>ホコリや髪を取り除く。 ふさがないように使う。 それでも直らないときは、化粧箱に表示の連絡先、又はテスコム電機(株) (裏表紙) にご相談ください。</p>
<p>本体や温風が異常に熱い。 本体内部が真っ赤になったり煙が出る。</p>	<p>安全装置が正常に動作していない。</p>	<p>すぐに使用を中止し、化粧箱に表示の連絡先、又はテスコム電機(株) (裏表紙) にご相談ください。</p>
<p>風が出ない。</p>	<p>電源コードが断線している。</p>	
<p>風が出たり、出なかったりする。</p>	<p>電源コードが断線しかけている。</p>	
<p>電源コード・電源プラグの根元部分に変形・傷んでいる。</p>		
<p>電源コードがねじれて戻らなくなった。</p>		
<p>本体の中で異物が動く音がする。</p>		
<p>電源プラグが異常に熱い。</p>	<p>コンセントの差し込みがゆるい。</p>	<p>コンセントに原因がある場合があります。すぐに使用を中止してください。</p>
<p>マイナスイオンの効果が感じられない。</p>	<p>以下の人には効果が現れにくいことがあります。</p> <ul style="list-style-type: none"> <li>●縮毛の人 ●髪のカセが強い人 ●髪が細く軟らかい人</li> <li>●髪が短い人 ●縮毛矯正をかけて間もない人</li> <li>●もともと髪質がしっとりしている人</li> </ul>	

