Nobby by TESCOM

User Manual

Hair Styler

NBIC40

For household use only

- Before use, please read this manual and be sure to use the appliance properly.
  In particular, be sure to thoroughly read and closely follow the Safety Warnings, as they are precautions for preventing personal injury and property damage.
- Store the manual in a location where it can be easily accessed at any time.



Specifications	
Product Number	NBIC40
Power Source	100-120V/200-240V～ switchable dual voltage type 50-60Hz
Power consumption	450-650W
Power cord Length	1.7m

Safety Warnings

- After use, turn off and unplug the unit.
- Pull on the power plug instead of the power cord when unplugging the styler.
- Before use, check the voltage used in the region where you are located, and set the voltage switch accordingly.
- Do not use the styler if the inside of the main unit turns red, if it generates smoke, or if you hear the sound of foreign matter moving inside it.
- Regarding the power cord, do not damage, forcibly bend, twist, pull, load any heavy weight onto, bring near to any hot object, pinch, modify, or bundle it when using the styler. Do not wrap the cord around the main unit.
- Long-term use or misuse may cause the power cord to become damaged. Do not use it if:
  ・The styler sometimes does not blow air;
  ・The power cord remains twisted;
  ・The base of the power cord or plug is deformed or damaged; or
  ・The power plug is loose in the AC outlet.
- If the supply cord is damaged, it must be replaced by the manufacturer, its service agent, or similarly qualified persons in order to avoid a hazard.
- Do not leave the styler with the power switch turned ON. Do not put the styler on anything flammable or sensitive to heat, such as a mattress, paper, or plastic bags.
- Do not use it on babies. Do not have a child close by when using it. This styler should be stored out of reach of children.
- This appliance is not intended for use by persons (including children) with reduced physical, sensory or mental capabilities, or lack of experience and knowledge, unless they have been given supervision or instruction concerning use of the appliance by a person responsible for their safety. Children should be supervised to ensure that they do not play with the appliance.
- Do not use the styler near any flammable material, such as gasoline, benzine, thinner, gas, or hair cosmetics agents. Do not use the styler with hairspray.
- Do not block the air intake or outlet.
- Do not put hairpins or any other foreign objects into the air intake or outlet.
- Examine the attachment before attaching it, and make sure that there are no foreign objects inside.
- Do not look into the air outlet while it is in use.
- Keep the air intake at least 10 cm away from hair to prevent hair from being sucked into the styler during use.

This symbol indicates that this product must not be used near water, such as baths or basins with shower water.

- Do not use this appliance near bathtubs, showers, basins or other vessels containing water.
  When the appliance is used in a bathroom, unplug it after use since the proximity of water presents a hazard even when the appliance is switched off.
  For additional protection, the installation of a residual current device (RCD) having a rated residual operating current not exceeding 30 mA is advisable in the electrical circuit supplying the bathroom. Ask your installer for advice.
- Do not use the styler with wet hands.
- Do not place the styler in water or pour water on it. Store it in a place with low moisture.
- Do not modify the styler. No one other than repair engineers should disassemble or repair the styler.
- Clean the air intake and inlet net at least once a month.
- Do not allow too much hair to wrap around the attachment.
- Do not touch any attachment or the air outlet during or immediately after use, and also avoid any accidental contact with your skin, as the attachments and the outlet will be hot.
- The styler is intended for the hair-drying and styling of human hair. Do not use it for other purposes, such as for pet hair.
- Do not let the styler fall or sustain impact. Do not use it if it has been damaged.
- Do not touch the styler with hair dye stained hands. Never apply alcohol, benzine, or enamel remover.
- Do not apply hairstyling products onto the attachment directly.
- The styler is not intended for business use. Keep it away from unspecified usage by a large number of people.

Part names and functions

Negative ions generated from the hair styler help protect the hair cuticle.

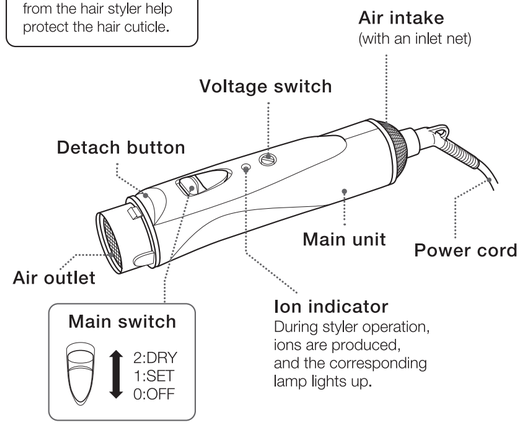

■Attachment

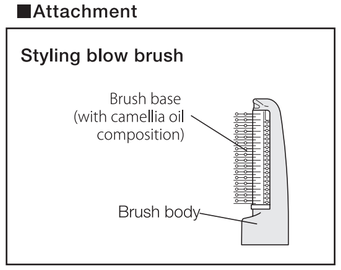

How to use

1. Add the attachment to the main unit.
   - Align the concave part of the attachment with the convex part of the main unit and push firmly.
   - To detach, pull the attachment away while maintaining pressure on the detach button.

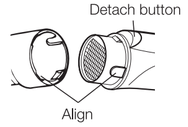

2. Using a coin or the like, set the voltage switch to the voltage used in the region where you are located.

⚠ Be sure not to use a 200-240V outlet when the voltage switch is set to 100-120V. Doing so may cause a fire, electrical shock, or burns.

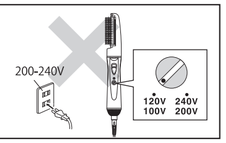

3. Insert the power plug into an AC outlet.
4. Set the main switch to “2” or “1”.
5. After use, turn off and unplug the unit.

Maintenance

Unplug the appliance and allow it to cool before performing maintenance.

Main unit

Wipe away any dirt with a dry soft cloth.
To clean off difficult dirt, immerse a cloth in soapy water or neutral detergent diluted with water, wring it dry, and wipe away the dirt.

Troubleshooting

Issue	Possible cause	Solution
The air stream is extremely weak.	The voltage switch is not set to the voltage used in the region where you are located.	Set the voltage switch to the proper voltage.
The main body or the air stream is extremely hot. Sparks appeared from the air outlet, and then the appliance stopped working. (Stoppage due to safety mechanism function.)	The air intake is blocked. Dust and hair have become attached to the air intake.	Turn off and unplug the appliance and wait until the main unit has cooled completely. Before switching the appliance on again, check the air intake and make sure that it is not being blocked by dust or hair.
I cannot feel the effect of the negative ions.	The effect of the negative ions is less apparent in people with the following hair types. ・Curly hair ・Wavy hair ・Thin, fine hair ・Short hair ・Recently straightened hair ・Naturally oily hair	
Other abnormalities or defects are present.	Immediately stop using the styler.	

Air intake

1. To remove the net from the main unit, turn the inlet net in the direction of the arrow in the illustration until the ▌ mark on the net is aligned with the ◀ mark on the main unit.
2. Use a soft brush or the like to remove dust and hair from the air i ntake and inlet net.
3. Insert the inlet net into the main unit by aligning the ▌ mark on the net with the ◀ mark on the main unit, and then turn the net in the direction of the arrow in the illustration until the ▌imark on the net is aligned with the ▌ mark on the main unit.

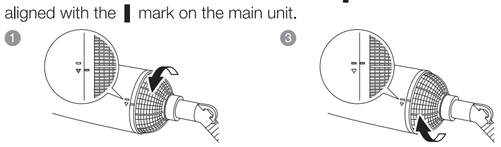

Attachment

Remove the attachment from the main unit, and use a soft brush or the like to remove dust and hair, etc.
When dirt build-up is a concern, wash the attachment in water and allow to dry completely.

The brush base may be cleaned after removing it from the brush body.

・How to detach
Remove the brush base from the brush body while pushing the brush base down.

・How to attach
Insert the bottom of the brush base into the brush body, and insert the top while pushing the brush base down.

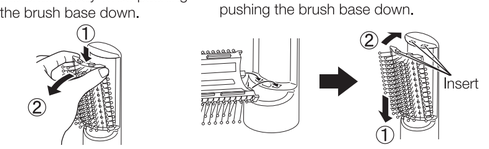

Nobby by TESCOM

使用說明書

負離子捲髮吹風機

NBIC40

家庭用

- 使用前，請務必詳閱本使用說明書，正確使用本產品。
  「安全注意事項」能將人身傷害及財產損失防患於未然。
  敬務必仔細閱讀並遵守注意事項。

- 使用說明書請務必存放於使用者隨時可翻閱之處。



規格	
產品編號	NBIC40
電源	100-120/200-240V～ 切換式　50-60Hz
消耗電量	450-650W
電源線長度	1.7m

安全注意事項

- 使用後務必關閉電源，並自插座拔除電源插頭。
- 自插座拔除電源插頭時，請手持插座部位。
- 使用前請確實使用區域的電壓，調整電壓切換開關。
- 本體內部變紅、冒煙，或本體發出異物聲響時，請勿使用。
- 請勿毀損電源線。
  使用時請勿過度彎折、扭轉、拉扯、重壓、靠近熱源、夾壓、改造或捆綁。請勿將電源線纏繞於主機上。
- 長時間使用或不當使用，可能會導致電源線斷裂，因此下列狀況發生時請勿使用。
  - 使用過程中，風時吹時停時。
  - 電源線扭轉後無法復原。
  - 電源線、插頭根部變形或損傷。
  - 插座插入部位鬆動。
- 為避免危險，當電源線損傷時，請交由製造業者、經銷商或具有該類資格的技師更換。
- 開關開啟後請勿閒置。請勿放置於耐熱度低的物品上，例如棉被、紙類等易燃物或塑膠袋等。
- 不可用於嬰幼兒。請勿於幼兒周遭使用。請勿存放於幼兒伸手可及之處。
- 在使用本產品時，除非於可負責安全之人監督下使用，或經事前指導，否則不可將本產品提供給知覺、精神能力耗弱者（包含孩童）或不具備使用經驗或知識之人使用。因本產品設計並非供上述之人使用的產品。請注意勿讓孩童持本產品嬉戲。
- 請勿於易燃物（汽油、揮發油、稀釋劑、瓦斯、髮膠等）附近使用。請勿同時使用噴霧式整髮劑。
- 使用過程中，請勿阻塞入風口及出風口。
- 請勿從入風口或出風口塞進髮夾等異物。
- 安裝配件前，請確認其中並無異物。
- 使用中請勿窺看出風口。
- 為避免髮絲捲進本產品，使用時讓髮絲與入風口保持10cm以上距離。

本記號代表本產品不可在近水（浴池、淋浴間等）處使用。

不要靠近浴室、臉盆或其它裝有水的容器使用本產品。
在浴室內使用本產品時，由於在近水處，故使用完畢後應取下插頭，否則即使將本產品斷電亦可能發生危險。
為達到多重保護之目的，建議在浴室之供電電路上安裝殘餘動作電流不超過30mA 之漏電斷路器(RCD)，可諮詢安裝人員。

- 雙手濡溼時請勿使用。
- 請勿浸水、潑水，並請保管在溼氣少的場所。
- 請勿改裝。除維修技師外，請勿進行拆解或維修。
- 入風口、進風網每個月至少清理一次。
- 配件上請勿一次纏捲過多的頭髮，也請勿重覆纏捲。
- 使用中或剛使用完畢後，配件及出風口仍呈高溫，請勿觸摸，同時請勿接觸肌膚。
- 請勿使用於吹乾頭髮、整髮以外的用途（寵物等）。
- 請勿掉落或撞擊。如有破損請勿使用。
- 手上沾有染髮劑時請勿觸碰本產品。
  請勿使用酒精、揮發油、去光水等擦拭。
- 請勿直接對配件塗抹整髮劑。
- 請勿作為業務用途。此外亦請勿放置於不特定多數人可取用的場所。

產品部位名稱與作用

捲髮吹風機產生的負離子會保護毛鱗片。

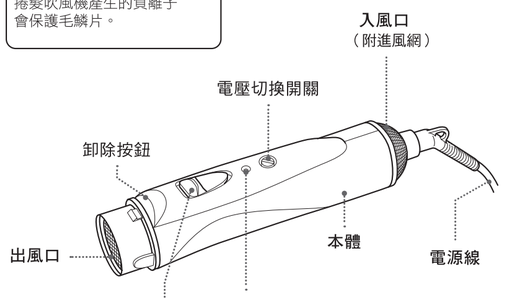

■配件

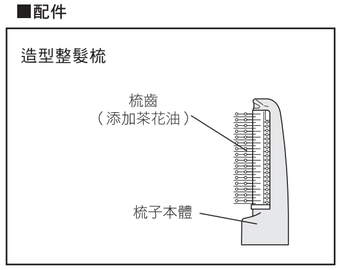

使用方法

1. 對本體安裝配件。
   - 拆取時，請按著卸除按鈕拔下。
   - 將配件的凹部與本體的凸部嵌合，並確實插入。

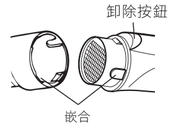

2. 使用硬幣等，將電壓切換開關轉到使用地區的電壓。

⚠ 將電壓切換開關轉到100-120V，請勿使用200-240V的插座。
否則可能會引發火災、觸電或燙傷。

3. 將電源插頭插入插座。
4. 將主開關切到「2」或「1」。
5. 使用後，關閉開關並拔下電源插頭。

清潔方法

拔下電源插頭，待產品冷卻後再保養。

本體

使用乾燥的軟布擦拭汙垢。
汙垢難以擦除時，可將軟布浸泡於「肥皂水」或「以水稀釋的中性清潔劑」中，確實擰乾後再擦拭。

入風口

1. 將進風網朝圖示方向旋轉，接著將◀標誌對準▌標誌，從本體拆下。
2. 使用軟刷等清除入風口或進風網附著的灰塵或頭髮。
3. 使◀標誌對準▌標誌，將進風網嵌合至本體，再朝圖示的方向旋轉到▌標誌對齊。

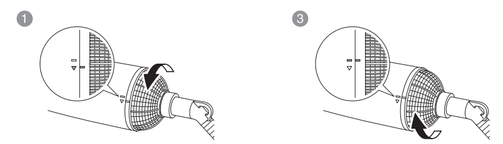

配件

從本體拆下，將附著的灰塵或頭髮清除乾淨。
若感覺特別髒汙時，以水清洗並充分乾燥。

梳齒可自梳子本體拆下清理。

- 拆卸方法
  一邊按下梳齒，
  一邊從梳子本體拆下。
- 安裝方法
  將梳齒下部嵌在梳子本體上，
  往下壓後嵌入上部。

疑似故障時

異常現象	可能的原因	處理方法
風量異常微弱。	電壓切換開關不符合使用地區的電壓。	將電壓切換開關轉到符合的電壓。
本體或出風異常發熱。 出風口看得到火花，且完全不運轉。（因安全裝置動作而停止）	入風口阻塞。 入風口附著灰塵或頭髮。	關閉開關並拔除電源線，等待至本體冷卻為止。再次開啟開關前，請確認入風口並未被灰塵或頭髮阻塞。
負離子效果不顯著。	使用者如有下列請況，其使用效果將較不明顯。 ・捲髮 ・自然卷嚴重 ・髮質細軟 ・短髮 ・頭髮剛燙直不久 ・原本髮質即屬潤澤型	
有其他異常或故障。	請立即停止使用。	