


User Manual

Negative Ions 2 ways Brush Hair Iron

NTIR1832

For household use only

- Before use, please read this manual and be sure to use the iron properly.
The manufacturer assumes no responsibility for the iron when it is used in ways other than the proper method described in this manual. In particular, be sure to read the Safety Warnings.
- Store the manual in a location where it can be easily accessed at any time.

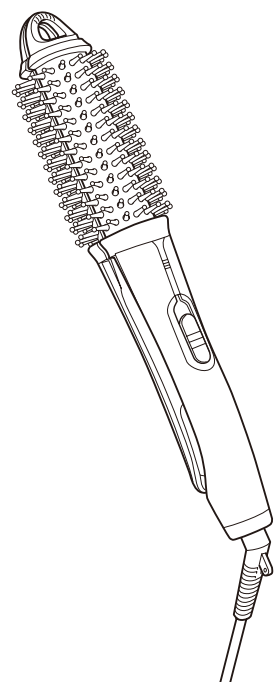

Safety Warnings

- Before using the appliance, check that it is compatible with the power supply in your locality.
- Before using the appliance, ensure that there is no damage to the power cord and plug or to the main unit.
- Do not let the appliance fall or sustain impact.
- Do not pull on the power cord. Do not coil the power cord around the main unit.
- After use, be sure to turn off the switch and remove the power plug from the outlet.
- When the appliance is connected to the power supply, never leave it unattended.
- Do not soak the appliance or wet it with water or other liquid. Do not handle the appliance with wet hands.
- Do not store the appliance in areas with high humidity or near water.
- Do not use the appliance within reach of children. Do not store the appliance within reach of children.
- Do not place the appliance on bedding, paper, vinyl, or any other material that is flammable or intolerant to heat. Do not use the appliance near gas or flammable fuels. After using the appliance, wait until it has cooled completely before storing it.
- Do not use the appliance on wet hair.
- Do not apply the iron bars to the same part of the hair for more than 10 seconds.
- Do not use the appliance on hair to which perming or straightening solution has been applied.
- The appliance is not intended for business use. Keep it away from unspecified usage by a large number of people.
- Never apply alcohol, benzine, or enamel remover.
- If the iron bars do not become hot or if the appliance displays any other abnormalities, immediately turn off the switch and unplug the appliance.
- The appliance must only be disassembled by an authorized repair engineer.
- This appliance is not intended for use by persons (including children) with reduced physical, sensory or mental capabilities, or lack of experience and knowledge, unless they have been given supervision or instruction concerning use of the appliance by a person responsible for their safety..
- Always place the appliance with the stand, if any, on a heat-resistant, stable flat surface.

- Children should be supervised to ensure that they do not play with the appliance.
- If the supply cord is damaged, it must be replaced by the manufacturer, its service agent, or similarly qualified persons in order to avoid a hazard.




This symbol indicates that this product must not be used near water, such as baths or basins with shower water.


Do not use this appliance near bathtubs, showers, basins or other vessels containing water. When the hair iron is used in a bathroom, unplug it after use since the proximity of water presents a hazard even when the hair iron is switched off. For additional protection, the installation of a residual current device (RCD) having a rated residual operating current not exceeding 30 mA is advisable in the electrical circuit supplying the bathroom.

BURN HAZARD

Keep appliance out of reach from young children, particularly during use and cool down. The part indicated in color in the picture becomes hot, so do not touch it when the appliance is in use or before it has completely cooled.

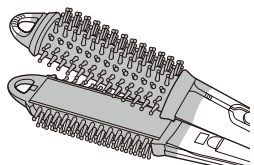


- Coil the hair around the brush no more than one full turn.

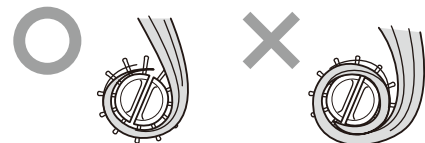


- Take care about where you place your hands while using the brush to ensure your hair does not become entangled.
- If your hair becomes entangled in the brush, immediately turn off the switch and unplug the appliance, and then use a thin stick or similar to untangle your hair little by little.


Part Names and Functions

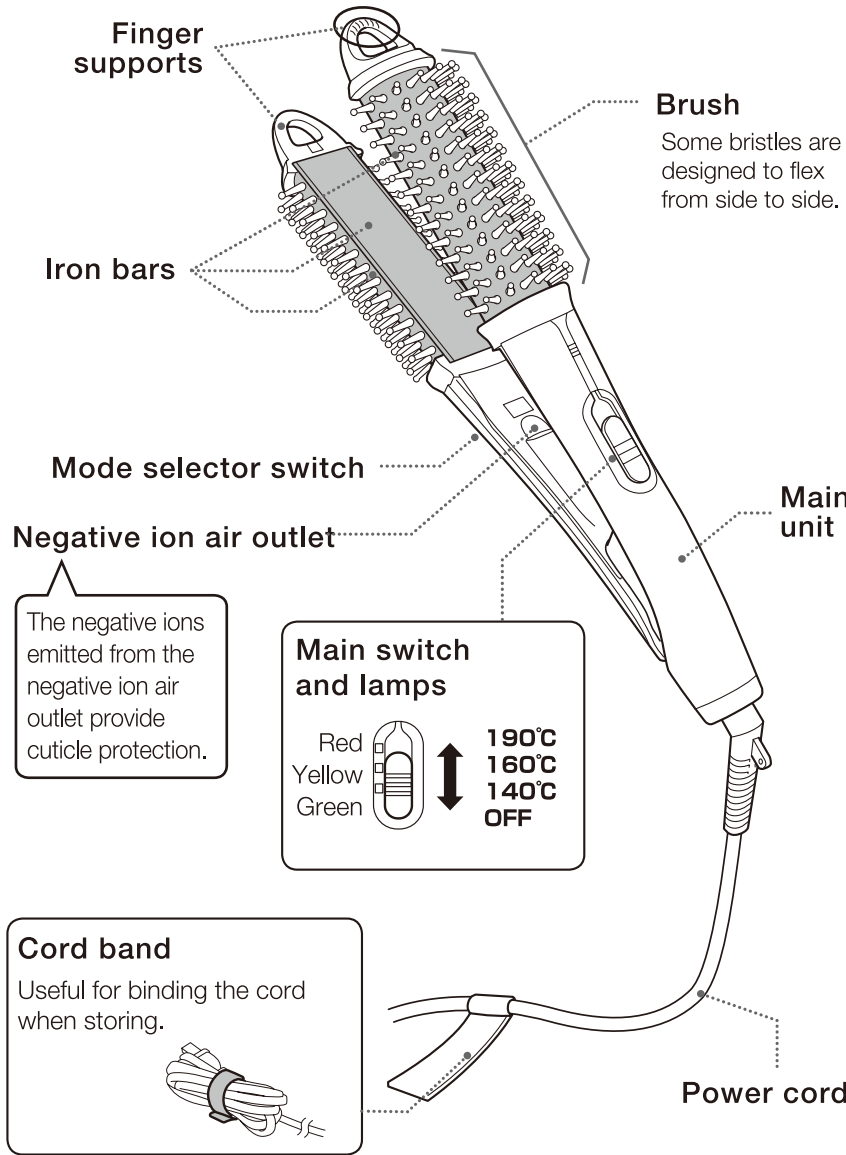

Mode selector switch

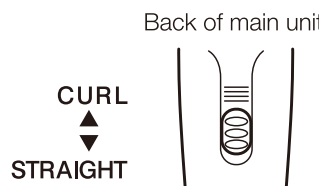

Width of the iron bars

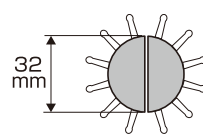

Auto power-off function

The power turns off automatically after about 30 minutes. * Even when the power is turned off, the switch remains in the ON position. Be sure to slide the switch to OFF before disconnecting the power plug.

Specifications

Product number	NTIR1832
Power Source	100-240V~ 50-60Hz
Power consumption	59-62W
Power cord length	1.7m

How to use

How to use the hair iron

- 1 With the iron bars closed, slide the mode selector switch to CURL or STRAIGHT.
- 2 Insert the power plug into an outlet.
Do so after ensuring the main switch is OFF.
- 3 Slide the main switch to 140°C, 160°C, or 190°C.
* Select the correct temperature for your hair type.
Note that the tips of your hair are particularly delicate. Until you become accustomed to using the appliance, we recommend using the lower temperature settings.
When the temperature reaches the set level, the relevant light stops flashing and remains lit.
- 4 After use, slide the main switch to OFF and disconnect the power plug from the outlet.
When disconnecting the plug from the outlet, grasp the plug rather than the cord.
- 5 Wait until the appliance has completely cooled down and store it in a location with low humidity.
Store the appliance with the iron bars closed and the mode selector switch in the CURL position.



Caution


- After drying hair, wait for two to three days before using the hair iron.
- Hair that has been treated with a hair manicure should be washed thoroughly with shampoo and dried completely before using the hair iron.

Hair arrangement

STRAIGHT


●Straightening

- 1 Take a 5 to 6 cm wide bunch of hair and sandwich it in the center of the iron bars.
- 2 Pinch the finger supports to close the iron bars and then slowly slide the hair iron along the hair from the roots toward the ends, keeping it parallel to the direction of the hair.
If the hair becomes caught, start over. Repeat this process a few times depending on the level of curliness of the hair.
- 3 Finish by tidying up the hair with styling products.
* This hair iron is intended to temporarily straighten curly hair. It is not designed to straighten frizzy hair.

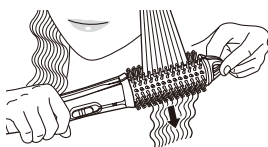


●Loose curls

- 1 Take a 2 to 3 cm wide bunch of hair and sandwich it in the center of the iron bars.
- 2 Pinch the finger supports to close the iron bars and then rotate the hair iron inwards by 160 degrees.
* Rotating further may cause the hair to become entangled and caught in the brush.
- 3 Slowly slide the iron down, with small pulls.
- 4 After reaching the end of the hair, loosen your grip on the finger supports to allow the iron bars to open, and then slowly rotate the iron inwards and remove it from the hair.

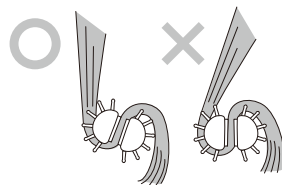


* The resulting level of curliness may vary depending on the hair type and conditions. Coiling the hair harshly, applying the hair iron for extended periods, or using any other techniques aimed at increasing curliness may damage the hair.

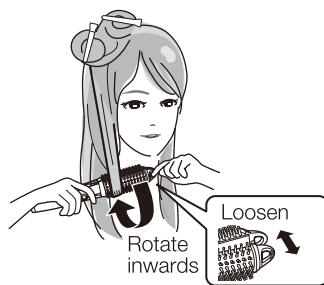

CURL

●Curly ends

- 1 With the hair perpendicular to the hair iron, coil the ends around the iron and lightly cup your hand around it to hold it in place for 3 to 5 seconds.
* Take care to avoid touching the high-temperature areas.
* Coil the hair around the brush no more than one full turn.
- 2 Remove the hair iron from the hair by slowly rotating it.



Product Maintenance

Before cleaning the appliance, turn off the switch, disconnect the power plug from the outlet, and let it cool down.

Wipe away stains with a dry soft cloth.

To clean off difficult dirt, immerse a soft cloth into soapy water or neutral detergent diluted with water, wring it dry and wipe away the dirt.

Troubleshooting

Issue	Possible cause	Solution
There is an odor when using the appliance for the first time.	It is not a failure; this is simply due to the heat produced by the heating components.	You can continue to use the appliance.
There does not appear to be any negative ion effect.	The effect of negative ions may not be apparent for users with the following hair types: · Frizzy hair · very curly hair · fine and soft hair · Short hair · naturally moist hair	
There are other abnormalities or failures.	Immediately stop using the hair iron and consult with the store of purchase.	

In order to download this user manual, please visit the TESCOM website below.
► <http://www.tescom-japan.co.jp/global/>


Buku Petunjuk Pemakaian

Setrika Rambut 2WAY Ion Negatif

NTIR1832

Untuk Penggunaan Rumah Tangga

- Mohon agar Buku Petunjuk Pemakaian ini dibaca dengan baik sebelum pemakaian, dan pakailah peralatan dengan benar. Produsen tidak bertanggung jawab untuk penggunaan yang tidak sesuai dengan yang tertulis di dalam Buku Petunjuk Pemakaian atau penggunaan yang tidak benar. Mohon baca dengan baik terutama bagian “Perhatian untuk Masalah Keselamatan”
- Mohon untuk menyimpan Buku Petunjuk Pemakaian di tempat yang selalu dapat dilihat oleh Pengguna.

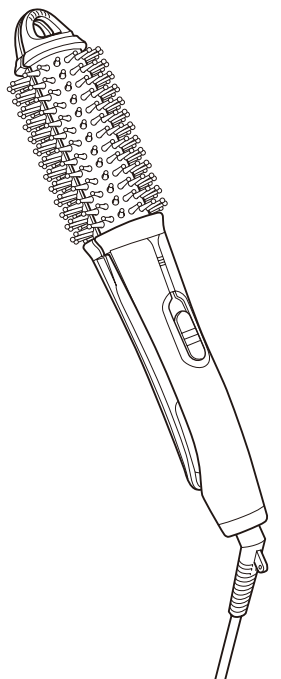

IN

Perhatian untuk Masalah Keselamatan

- Sebelum memasukkan steker ke stopkontak, pastikan tegangannya 100 ~ 240 V.
- Sebelum menggunakan Setrika Rambut, pastikan tidak ada kerusakan pada kabel listrik dan steker.
- Berhati-hatilah untuk tidak menjatuhkan atau membenturkan Unit. Jangan menarik kabel listrik.
- Pastikan untuk mematikan tombol setelah pemakaian, dan lepaskan steker dari stopkontak.
- Jangan menumpahkan air atau larutan apa pun pada Produk, jangan dibasahi. Jangan digunakan dengan tangan yang basah.
- Jangan menyimpan dan menggunakan Produk di dekat bak mandi, tempat dengan temperatur tinggi atau pun di dekat air.
- Jangan menggunakan di tempat yang bisa dijangkau oleh tangan ank-anak. Jangan disimpan di tempat yang terjangkau tangan anak-anak.
- Jangan meletakkan Produk di tempat yang mudah terbakar atau tidak tahan panas seperti tempat tidur, kertas atau pun plastik. Jangan digunakan di dekat bahan yang mudah terbakar seperti gas atau material yang bisa terbakar. Setelah digunakan, simpan Produk setelah benar-benar dalam kondisi dingin.
- Gunakan Produk tanpa mengaplikasikan obat styling rambut. Jangan kenakan Setrika Rambut pada tempat yang sama lebih dari 5 detik.
- Jangan menggunakan Produk pada rambut yang menggunakan obat rebonding atau obat pelurus rambut.
- Jangan digunakan sebagai alat kerja. Jangan diletakkan di tempat yang bisa digunakan sembarang orang.
- Saat melakukan pemeliharaan Produk, jangan menggunakan alkohol, bensin atau pun cairan penghapus cat kuku.
- Saat bagian setrika tidak menghangat atau tidak beroperasi normal, segera matikan saklar dan cabut saklar dari stopkontak.
- Produk ini tidak boleh dibongkar atau diperbaiki selain oleh teknisi yang telah memiliki izin.
- Demi keselamatan, selain dari orang-orang yang bertanggung jawab dengan memperhatikan cara penggunaan atau sudah mendapatkan petunjuk tentang cara penggunaan, produk ini tidak dimaksudkan untuk orang-orang yang mengalami gangguan fungsi tubuh, fungsi indera, fungsi mental (termasuk anak-anak) atau orang yang tidak memiliki pengalaman atau pengetahuan sebelumnya.
- Mohon diperhatikan agar anak-anak tidak menggunakan produk ini untuk bermain.

- Untuk menghindari bahaya, apabila ada kerusakan pada kabel listrik, segera tukarkan di toko penjualan atau pun orang yang memiliki sertifikasi.




Simbol ini menunjukkan bahwa produk ini tidak boleh digunakan di dekat air (bak mandi, pancuran, dsb.).


Jangan gunakan produk ini di dekat bak mandi, pancuran, tempat pencucian atau alat penampungan air. Untuk penggunaan produk ini di dalam kamar mandi, meskipun daya listrik produk ini dalam keadaan mati, karena berbahaya di dekat air, pastikan untuk mencabut kabel dari stopkontak setelah penggunaan.

Untuk lebih memastikan keamanan, disarankan untuk memasang Pengaman Arus Sisa (RCD) dengan nilai kebocoran arus 30 mA atau kurang pada rangkaian distribusi daya di dalam kamar mandi. Harap menghubungi ahli pasang.

- Setrika/Attachment bisa menjadi sangat panas, jadi saat menggunakan atau tepat setelah menggunakan jangan menyentuh bagian yang diwarnai pada gambar. Jangan menyentuhkan pada kulit.

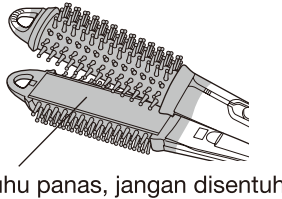


- Gunakan hanya pada rambut kering. Ada resiko melepuh.
- Jangan menggulung rambut secara menumpuk.

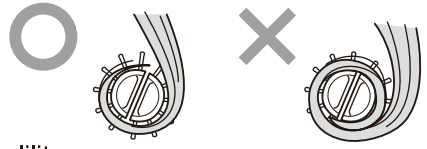


- Untuk mencegah rambut terilit, gunakan sambil memeriksa bagian depan.
- Apabila rambut terilit di sisir, segera matikan listriknya, cabut steker dari stopkontak, lepaskan rambut sedikit-demi sedikit menggunakan kayu tipis dsb.


Nama dan Cara Kerja Komponen

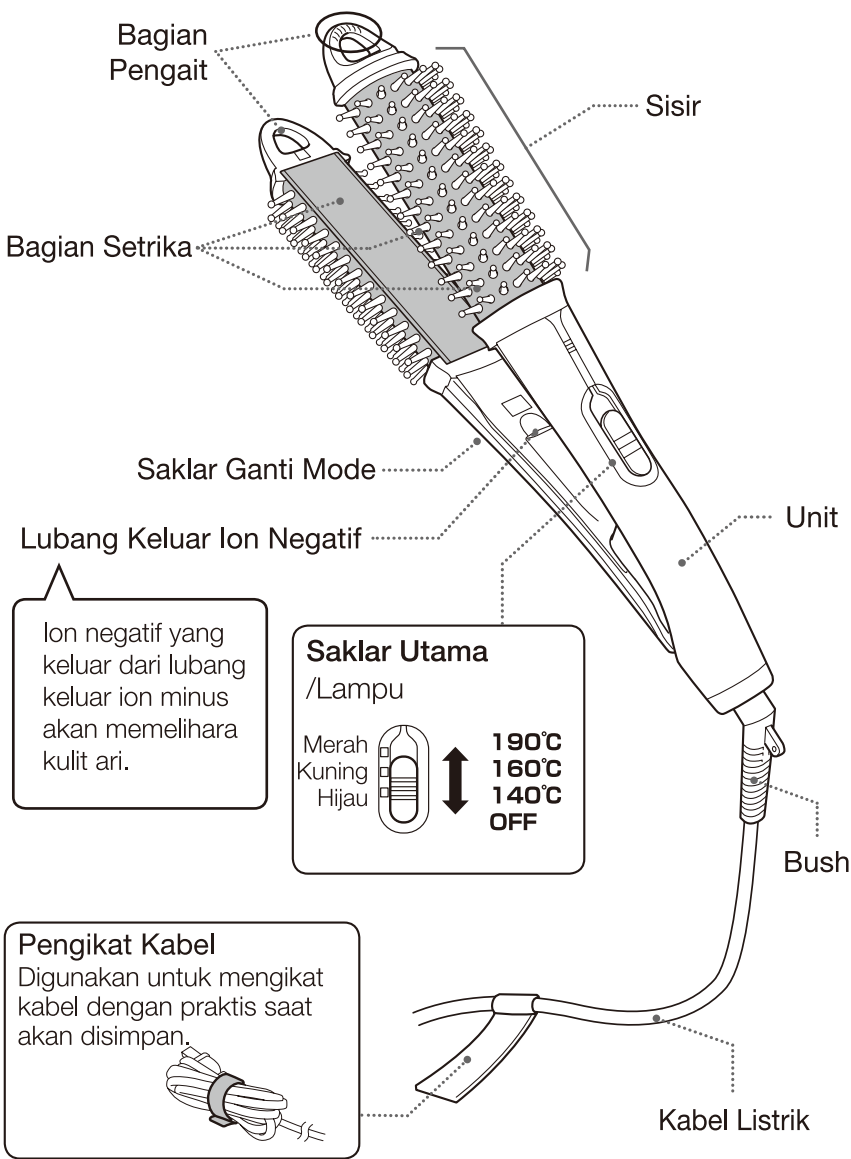

Saklar Ganti Mode

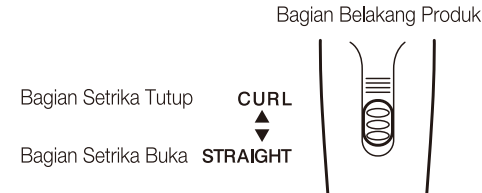

Diameter bagian Setrika

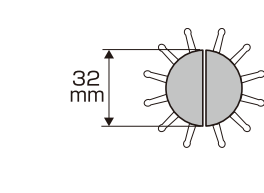

Mengenai Fungsi OFF Listik Otomatis

60 menit setelah dinyalakan, listriknya akan mati secara otomatis. *Walaupun listriknya mati, saklarnya masih dalam posisi ON. Pastikan untuk merubah posisi saklar ke OFF, kemudian mencabut steker dari stopkontak.

Spesifikasi	
Nomor Produk	NTIR1832
Sumber Listrik	100-240V~ 50-60Hz
Konsumsi Daya	59-62W
Panjang Kabel Listrik	1.7m

Cara Penggunaan

Cara Menggunakan Setrika Rambut

- Dengan Bagian Setrika dalam kondisi tertutup, geser saklar Ganti Mode ke “Ikal” atau “Lurus”.
- Masukkan steker listrik ke stopkontak.
Pastikan kondisi Saklar Utama berada pada posisi OFF saat dimasukkan.
- Geser posisi Saklar Utama ke “140°C”, “160°C” atau “190°C”.
*Sesuaikan pengaturan suhu dengan kualitas rambut. Perhatikan terutama untuk rambut yang mudah luka.
Sampai terbiasa, disarankan untuk menggunakan suhu yang rendah.
Saat mencapai suhu yang diinginkan, Lampu akan berubah dari kedap-kedip menjadi nyala penuh.
- Setelah penggunaan, geser Saklar Utama ke posisi “OFF”, cabut steker listrik dari stop kontak.
Saat melepas steker dari stopkontak, tariklah dengan memegang stekernya.
- Setelah benar-benar dingin, simpan di tempat yang kelembaban udaranya rendah.
Dengan Bagian Setrika dalam kondisi tertutup, setelah menggeser Saklar Ganti Mode ke “Ikal”, kemudian simpan.



Perhatian

- Jangan membiarkan Unit dalam waktu yang lama dalam kondisi hidup.
- Jangan mellilit kabel listrik. Ada resiko kabelnya terputus.
- Apabila rambut diwarnai menggunakan hair dye, gunakan setelah 2-3 hari.
- Apabila rambut diwarnai menggunakan hair manicure, cuci rambut menggunakan shampoo dan lakukan setelah rambut benar-benar kering.

Cara Mengatur Rambut

STRAIGHT

- Rambut Lurus

- Ambil seikat rambut dengan lebar 5-6 cm, jepitkan di tengah bagian Setrika.

- Tutup bagian Setrika dengan menjepit pada bagian pengait, geser perlahan-lahan.

Apabila rambut tersangkut, lakukan sekali lagi. Ulangi beberapa kali sesuai dengan kondisi rambut.

- Untuk menyelesaikannya, oleskan rambut dengan obat styling.

*Setrika rambut ini bisa meluruskan rambut ikal secara sementara. Untuk rambut keriting tidak memiliki efek.

- Untuk Rambut Gulung Longgar

- Ambil seikat rambut dengan lebar 2 – 3 cm, jepitkan di tengah bagian setrika.

- Tutup bagian Setrika dengan menjepit pada Bagian pengait, gulung ke dalam dan putar sebanyak 160°.

*Jika terlalu banyak diputar, rambut dapat terilit pada sisir.

- Tarik sedikit demi sedikit ke arah bawah dan geser perlahan-lahan.

- Setelah digeser sampai ke ujung rambut, longgarkan jepitan jari pada bagian pengait dan buka bagian Setrika sedikit demi sedikit, lepaskan bagian Setrika sambil memutar gulungan ke arah dalam.

*Hasil ikal rambut akan berbeda tergantung dari kualitas rambut. Walaupun ikalnya lemah, apabila terus menerus digulung, bisa menyebabkan rambut rusak.

CURL

- Ikal di Ujung Rambut

- Gulung ujung rambut sehingga Setrika dan rambut bisa tetap tegak lurus, kemudian jepit ringan dengan tangan selama 3-5 detik agar ujung rambut tidak lepas.
*Hati-hati jangan sentuh bagian yang panas.
*Jangan menggulung rambut berlapis.

- Lepaskan Setrika dengan memutar perlahan-lahan.

Cara Perawatan

Matikan listrik, cabut steker, lakukan perawatan setelah dingin.

Bersihkan kotoran menggunakan kain lap lembut dan kering. Untuk kotoran yang susah hilang, lap dengan baik menggunakan kain lembut yang diberi “air sabun” atau “deterjen netral yang diencerkan dengan air”.

Saat ada masalah

Untuk hal seperti ini	Penyebab yang mungkin	Cara penanggulangan
Saat pertama kali digunakan, akan mengeluarkan bau.	Panas karena heater, bukan suatu kerusakan.	Gunakan seperti biasa.
Efek ion negatif tidak terlihat.	Untuk orang-orang di bawah ini terkadang efek pemakaian kurang terlihat. Rambut keriting, rambut ikal, rambut yang halus, pendek, rambut yang memang lembab	
Ada keanehan/kerusakan lain.		Segera hentikan penggunaan.

Silakan lihat situs web **TESCOM** untuk mengunduh Buku Petunjuk Penggunaan ini melalui pranala di bawah ini.
▶ <http://www.tescom-japan.co.jp/global/>